



Standard Terminology for Nondestructive Examinations¹

This standard is issued under the fixed designation E1316; the number immediately following the designation indicates the year of original adoption or, in the case of revision, the year of last revision. A number in parentheses indicates the year of last reapproval. A superscript epsilon (ε) indicates an editorial change since the last revision or reapproval.

INDEX OF TERMS

Section

A:	Common NDT Terms
B:	Acoustic Emission (AE) Terms
C:	Electromagnetic Testing (ET) Terms
D:	Gamma- and X-Radiologic Testing (RT) Terms
E:	Leak Testing (LT) Terms
F:	Liquid Penetrant Testing (PT) Terms
G:	Magnetic Particle Testing (MT) Terms
H:	Neutron Radiologic Testing (NRT) Terms
I:	Ultrasonic Testing (UT) Terms
J:	Infrared Testing (IRT) Terms
K:	Optical Holographic Testing (HT) Terms
L:	Visual Testing (VT) Terms

1. Scope

1.1 This standard defines the terminology used in the standards prepared by the E07 Committee on Nondestructive Testing. These nondestructive testing (NDT) methods include: acoustic emission, electromagnetic testing, gamma- and X-radiology, leak testing, liquid penetrant testing, magnetic particle testing, neutron radiology and gauging, ultrasonic testing, and other technical methods.

1.2 Committee E07 recognizes that the terms examination, testing, and inspection are commonly used as synonyms in nondestructive testing. For uniformity and consistency in E07 nondestructive testing standards, Committee E07 encourages the use of the terms examination or inspection and their derivatives when describing the application of nondestructive test methods. In a specific standard, either examination or inspection shall be used consistently throughout the document. Similarly, E07 encourages the use of the term test and its derivatives when referring to the body of knowledge of a nondestructive testing method. There are, however, appropriate exceptions when the term test and its derivatives may be used to describe the application of a nondestructive test, such as measurements which produce a numeric result (for example, when using the leak testing method to perform a leak test on a

component, or an ultrasonic measurement of velocity). Additionally, the term test should be used when referring to the NDT method, that is, Radiologic Testing (RT), Ultrasonic Testing (UT), and so forth. (Example: Radiologic Testing (RT) is often used to examine material to detect internal discontinuities.)

NOTE 1—The following sentences clarify this policy and illustrate its use:

(a) Nondestructive testing methods are used extensively for the examination or inspection of materials and components.

(b) The E07 Committee on Nondestructive Testing has prepared many documents to promote uniform usage of the nondestructive testing methods that are applied to examine or inspect materials and components.

(c) Radiologic Testing (RT) is often used to inspect material to detect internal discontinuities.

(d) Magnetic Particle Testing (MT), Liquid Penetrant Testing (PT), and Visual Testing (VT) are often used to examine the surface of a component.

(e) The Bubble Leak Testing (BLT) method is sometimes used to leak test a pressure containing component to detect leaks.

(f) A guide for Nondestructive Testing of additively manufactured materials will describe several methods but a practice will focus on a single inspection method.


1.3 Section A defines terms that are common to multiple NDT methods, whereas the subsequent sections define terms pertaining to specific NDT methods.

1.4 As shown on the chart below, when a nondestructive examination or inspection produces an indication, the indication is subject to interpretation as false, nonrelevant, or relevant. If it has been interpreted as relevant, the necessary subsequent evaluation will result in the decision to accept or reject the material. With the exception of accept and reject, which retain the meaning found in most dictionaries, all the

¹ This terminology is under the jurisdiction of ASTM Committee E07 on Nondestructive Testing and is the direct responsibility of Subcommittee E07.92 on Editorial Review.

Current edition approved March 1, 2023. Published April 2023. Originally approved in 1989. Last previous edition approved in 2022 as E1316 – 22a. DOI: 10.1520/E1316-23.

words used in the chart are defined in Section A.

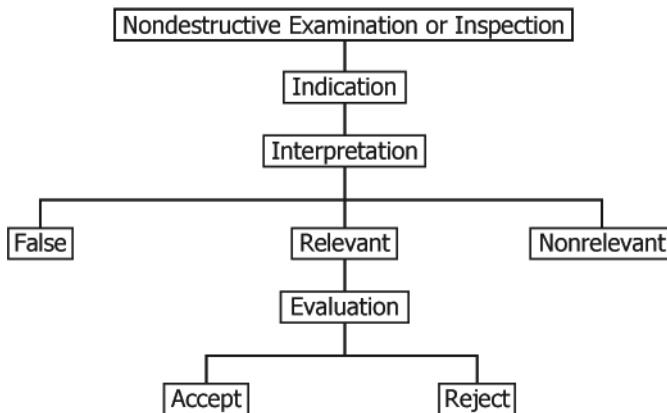

1.5 *This international standard was developed in accordance with internationally recognized principles on standardization established in the Decision on Principles for the Development of International Standards, Guides and Recommendations issued by the World Trade Organization Technical Barriers to Trade (TBT) Committee.*

2. Referenced Documents

2.1 ASTM Standards:²

² For referenced ASTM standards, visit the ASTM website, www.astm.org, or contact ASTM Customer Service at service@astm.org. For *Annual Book of ASTM Standards* volume information, refer to the standard's Document Summary page on the ASTM website.

Section A: Common NDT Terms

The terms defined in Section A are the direct responsibility of Subcommittee E07.92, Editorial Review.

acceptable quality level, *n*—the maximum percent defective or the maximum number of units defective per hundred units that, for the purpose of sampling test, can be considered satisfactory as a process average.

calibration, instrument, *v*—the comparison of an instrument with, or the adjustment of an instrument to, a known reference(s) often traceable to the National Institute of Standards and Technology (NIST). (See also **standardization, instrument**.)

cognizant engineering organization, *n*—the company, government agency or other authority responsible for the design, or end use, of the material or component for which nondestructive testing is required.

DISCUSSION—In addition to design personnel, the cognizant engineering organization could include personnel from engineering, material and process engineering, stress analysis, nondestructive testing, quality assurance and others, as appropriate.

defect, *n*—one or more flaws whose aggregate size, shape, orientation, location, or properties do not meet specified acceptance criteria and are rejectable.

Digital Imaging and Communication for Nondestructive Evaluation (DICONDE), *n*—a vendor-neutral digital data

- E94** *Guide for Radiographic Examination Using Industrial Radiographic Film*
E1106 *Test Method for Primary Calibration of Acoustic Emission Sensors*
E1781 *Practice for Secondary Calibration of Acoustic Emission Sensors*

NOTE 2—This standard defines the terminology used in the standards prepared by Committee E07 on Nondestructive Testing and published in the *Annual Book of ASTM Standards*, Volumes 03.03 and 03.04.

3. Significance and Use

3.1 The terms found in this standard are intended to be used uniformly and consistently in all nondestructive testing standards. The purpose of this standard is to promote a clear understanding and interpretation of the NDT standards in which they are used.

4. Terminology

4.1 **Definitions**—The definitions provided below have been broken up into sections; each section is arranged in alphabetical order.

storage and transmission protocol that defines the organization of NDT image data and associated metadata in a standard electronic format.

DISCUSSION—DICONDE is based on and inherits from the universally adopted medical standard, DICOM, which facilitates the interoperability of imaging equipment through data storage and network communication protocols.

discontinuity, *n*—a lack of continuity or cohesion; an intentional or unintentional interruption in the physical structure or configuration of a material or component.

evaluation, *n*—determination of whether a relevant indication is cause to accept or to reject a material or component.

examination, *n*—a procedure for determining a property (or properties) or other conditions or characteristics of a material or component by direct or indirect means.

DISCUSSION—Examples include utilization of X-rays or ultrasonic waves for the purpose of determining (directly or by calculation) flaw content, density, or (for ultrasound) modulus; or detection of flaws by induction of eddy currents, observing thermal behavior, AE response, or utilization of magnetic particles or liquid penetrants.

false indication, *n*—an NDT indication that is interpreted to be caused by a condition other than a discontinuity or imperfection.

flaw, *n*—an imperfection or discontinuity that may be detectable by nondestructive testing and is not necessarily rejectable.

flaw characterization, *n*—the process of quantifying the size, shape, orientation, location, growth, or other properties, of a flaw based on NDT response.

imperfection, *n*—a departure of a quality characteristic from its intended condition.

indication, *n*—the response or evidence from a nondestructive examination.

DISCUSSION—An indication is determined by interpretation to be relevant, non-relevant, or false.

inspection, *n*—see **examination**.

interpretation, *n*—the determination of whether indications are relevant or nonrelevant.

interpretation, *n*—the determination of whether indications are relevant, nonrelevant, or false.

Nondestructive Evaluation, *n*—see **Nondestructive Testing**.

Nondestructive Examination, *n*—see **Nondestructive Testing**.

Nondestructive Inspection, *n*—see **Nondestructive Testing**.

Nondestructive Testing (NDT), *n*—the development and application of technical methods to examine materials or components in ways that do not impair future usefulness and serviceability in order to detect, locate, measure and evaluate

flaws; to assess integrity, properties and composition; and to measure geometrical characteristics.

nonrelevant indication, *n*—an NDT indication that is caused by a condition or type of discontinuity that is not rejectable. False indications are non-relevant.

reference standard, *n*—a material or object for which all relevant chemical and physical characteristics are known and measurable, used as a comparison for, or standardization of, equipment or instruments used for nondestructive testing. (See also **standardization, instrument**.)

relevant indication, *n*—an NDT indication that is caused by a condition or type of discontinuity that requires evaluation.

standard, *n*—(1) a physical reference used as a basis for comparison or calibration; (2) a concept that has been established by authority, custom, or agreement to serve as a model or rule in the measurement of quality or the establishment of a practice or procedure.

standardization, instrument, *n*—the adjustment of an NDT instrument using an appropriate reference standard, to obtain or establish a known and reproducible response. (This is usually done prior to an examination, but can be carried out anytime there is concern about the examination or instrument response.) (See also **calibration, instrument**.)

test, *n*—see preferred terms **examination** or **inspection**.

Section B: Acoustic Emission (AE) Terms

The terms defined in Section B are the direct responsibility of Subcommittee E07.04 on Acoustic Emission Method.

acoustic emission (AE), *n*—the class of phenomena whereby transient stress/displacement waves are generated by the rapid release of energy from localized sources within a material, or the transient waves so generated.

DISCUSSION—Acoustic emission is the recommended term for general use. Other terms that have been used in AE literature include: (1) stress wave emission, (2) microseismic activity, and (3) emission or acoustic emission with other qualifying modifiers.

acoustic emission channel, *n*—see **channel, acoustic emission**.
acoustic emission count (emission count) (N), *n*—see **count, acoustic emission**.

acoustic emission count rate, *n*—see **count rate, acoustic emission (emission rate or count rate) (N̄)**.

acoustic emission event, *n*—see **event, acoustic emission**.

acoustic emission event energy, *n*—see **energy, acoustic event**.

acoustic emission mechanism or acoustic emission source mechanism, *n*—a dynamic process or combination of processes occurring within a material, generating acoustic emission events. AE source mechanisms can be subdivided into several categories: material and mechanical, macroscopic and microscopic, primary and secondary.

DISCUSSION—Examples of macroscopic material AE source mechanisms in metals are incremental crack advancements, plastic deformation and fracture of inclusions. Friction and impacts are examples of mechanical AE. A crack advancement can be considered a

primary AE mechanism while a resulting crack surface friction can be considered as a secondary AE mechanism.

acoustic emission sensor, *n*—see **sensor, acoustic emission**.

acoustic emission signal amplitude, *n*—see **signal amplitude, acoustic emission**.

acoustic emission signal (emission signal), *n*—see **signal, acoustic emission**.

acoustic emission signature (signature), *n*—see **signature, acoustic emission**.

acoustic emission transducer, *n*—see **sensor, acoustic emission**.

acoustic emission waveguide, *n*—see **waveguide, acoustic emission**.

acousto-ultrasonics (AU), *n*—a nondestructive examination method that uses induced stress waves to detect and assess diffuse defect states, damage conditions, and variations of mechanical properties of a test structure. The AU method combines aspects of acoustic emission (AE) signal analysis with ultrasonic materials characterization techniques.

active source, *n*—one which exhibits increasing cumulative AE activity with increasing or constant stimulus.

adaptive location, *n*—source location by iterative use of simulated sources in combination with computed location.

AE activity, *n*—the presence of acoustic emission during a test.

AE amplitude, n —see **dB_{AE}**.

AE rms, n —the rectified, time averaged AE signal, measured on a linear scale and reported in volts.

AE signal duration, n —the time between AE signal start and AE signal end.

AE signal end, n —the recognized termination of an AE signal, usually defined as the last crossing of the threshold by that signal.

AE signal generator, n —a device which can repeatedly induce a specified transient signal into an AE instrument.

AE signal rise time, n —the time between AE signal start and the peak amplitude of that AE signal.

AE signal start, n —the beginning of an AE signal as recognized by the system processor, usually defined by an amplitude excursion exceeding threshold.

AE source intensity, n —average energy, counts or amplitude per hit.

array, n —a group of two or more AE sensors positioned on a structure for the purposes of detecting and locating sources. The sources would normally be within the array.

arrival time interval (Δt_{ij}), n —see **interval, arrival time**.

attenuation, n —the gradual loss of acoustic emission wave energy as a function of distance through absorption, scattering, diffraction and geometric spreading.

DISCUSSION—Attenuation can be measured as the decrease in AE amplitude or other AE signal parameter per unit distance.

average signal level, n —the rectified, time averaged AE logarithmic signal, measured on the AE amplitude logarithmic scale and reported in dB_{ae} units (where 0 dB_{ae} refers to 1 µV at the preamplifier input).

broadband or wideband AE sensor, n —an AE sensor which, when calibrated in accordance with Test Method E1106 or Practice E1781, exhibits a displacement or velocity response over several hundred kHz with a coefficient of variation of the response in V/m or V/m/s that does not exceed 50 %.

burst emission, n —see **emission, burst**.

channel, acoustic emission, n —an assembly of a sensor, preamplifier or impedance matching transformer, filters secondary amplifier or other instrumentation as needed, connecting cables, and detector or processor.

DISCUSSION—A channel for examining fiberglass reinforced plastic (FRP) may utilize more than one sensor with associated electronics. Channels may be processed independently or in predetermined groups having similar sensitivity and frequency characteristics.

continuous emission, n —see **emission, continuous**.

count, acoustic emission (emission count) (N), n —the number of times the acoustic emission signal exceeds a preset threshold during any selected portion of a test.

count, event (N_e), n —the number obtained by counting each discerned acoustic emission event once.

count rate, acoustic emission (emission rate or count rate) (\dot{N}), n —the time rate at which emission counts occur.

count, ring-down, n —see **count, acoustic emission**, the preferred term.

couplant, n —a material used at the structure-to-sensor interface to improve the transmission of acoustic energy across the interface during acoustic emission monitoring.

critically active source, n —one which exhibits an increasing rate of change of cumulative AE activity with increasing or constant stimulus.

critically intense source, n —one in which the AE source intensity consistently increases with increasing stimulus or with time under constant stimulus.

cumulative (acoustic emission) amplitude distribution $F(V)$, n —see **distribution, amplitude, cumulative**.

cumulative (acoustic emission) threshold crossing distribution $F_t(V)$, n —see **distribution, threshold crossing, cumulative**.

dB_{AE}, n —a logarithmic measure of acoustic emission signal amplitude, referenced to 1 µV at the sensor, before amplification.

$$\text{Signal peak amplitude (dB}_{AE}\text{)} = (\text{dB}_{1\mu\text{V at sensor}}) = 20 \log_{10}(A_1/A_0) \quad (1)$$

where:

A_0 = 1 µV at the sensor (before amplification), and
 A_1 = peak voltage of the measured acoustic emission signal (also before amplification).

Acoustic Emission Reference Scale:

dB _{AE} Value	Voltage at Sensor
0	1 µV
20	10 µV
40	100 µV
60	1 mV
80	10 mV
100	100 mV

DISCUSSION—In the case of sensors with integral preamplifiers, the A₀ reference is before internal amplification.

dead time, n —any interval during data acquisition when the instrument or system is unable to accept new data for any reason.

differential (acoustic emission) amplitude distribution $F(V)$, n —see **distribution, differential (acoustic emission) amplitude $f(V)$** .

differential (acoustic emission) threshold crossing distribution $f_t(V)$, n —see **distribution, differential (acoustic emission) threshold crossing**.

distribution, amplitude, cumulative (acoustic emission) $F(V)$, n —the number of acoustic emission events with signals that exceed an arbitrary amplitude as a function of amplitude V.

distribution, threshold crossing, cumulative (acoustic emission) $F_t(V)$, n —the number of times the acoustic emission signal exceeds an arbitrary threshold as a function of the threshold voltage (V).

distribution, differential (acoustic emission) amplitude $f(V)$,

n —the number of acoustic emission events with signal amplitudes between amplitudes of V and $V + \Delta V$ as a function of the amplitude V . $f(V)$ is the absolute value of the derivative of the cumulative amplitude distribution $F(V)$.

distribution, differential (acoustic emission) threshold crossing $f_t(V)$,

n —the number of times the acoustic emission signal waveform has a peak between thresholds V and $V + \Delta V$ as a function of the threshold V . $f_t(V)$ is the absolute value of the derivative of the cumulative threshold crossing distribution $F_t(V)$.

distribution, logarithmic (acoustic emission) amplitude $g(V)$,

n —the number of acoustic emission events with signal amplitudes between V and αV (where α is a constant multiplier) as a function of the amplitude. This is a variant of the differential amplitude distribution, appropriate for logarithmically windowed data.

dynamic range, n —the difference, in decibels, between the overload level and the minimum signal level (usually fixed by one or more of the noise levels, low-level distortion, interference, or resolution level) in a system or sensor.

effective velocity, n —velocity calculated on the basis of arrival times and propagation distances determined by artificial AE generation; used for computed location.

emission, burst, n —a qualitative description of an individual emission event resulting in a discrete signal.

DISCUSSION—Fig. 1 shows an oscilloscope trace of burst emission signals on a background of continuous emission signal.

emission, continuous, n —a qualitative description of emission producing a sustained signal as a result of time overlapping or successive emission events from one or several sources, or both.

DISCUSSION—Fig. 2 and Fig. 3 show oscilloscope traces of continuous emission signals at two different sweep rates.

energy, acoustic emission event, n —the total elastic energy released by an emission event.

energy, acoustic emission signal, n —the energy contained in an acoustic emission signal, which is evaluated as the integral of the volt-squared function over time.

evaluation threshold, n —a threshold value used for analysis of the examination data. Data may be recorded with a *system examination threshold* lower than the *evaluation threshold*. For analysis purposes, dependence of measured data on the *system examination threshold* must be taken into consideration.

event, acoustic emission (emission event), n —an occurrence of a local material change or mechanical action resulting in acoustic emission.

event count (Ne), n —see **count, event**.

event count rate (\dot{Ne}), n —see **rate, event count**.

examination area (examination region), n —that portion of a structure, or test article, being examined using acoustic emission technology.

Felicity effect, n —the presence of detectable acoustic emission at a fixed predetermined sensitivity level at stress levels below those previously applied.

Felicity ratio, n —the ratio of the stress at which acoustic emission is detected, to the previously applied maximum stress.

DISCUSSION—The fixed sensitivity level will usually be the same as was used for the previous loading or examination.

first hit location, n —a zone location method defined by which a channel among a group of channels first detects the signal.

floating threshold, n —any threshold with amplitude established by a time average measure of the input signal.

hit, n —the detection and measurement of an AE signal on a channel.

instrumentation dead time, n —see **dead time, instrumentation**.

intense source, n —one in which the AE source intensity of an active source consistently exceeds, by a specified amount, the average AE source intensity of active sources.

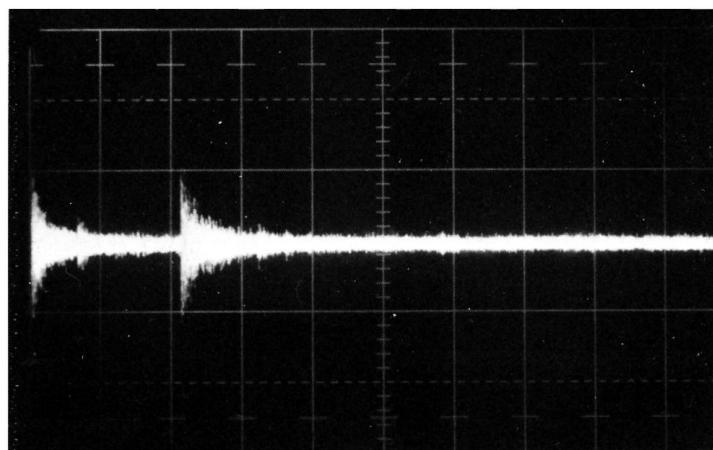


FIG. 1 Burst Emission Signal on a Continuous Emission Signal Background (Sweep Rate—5 ms/cm)

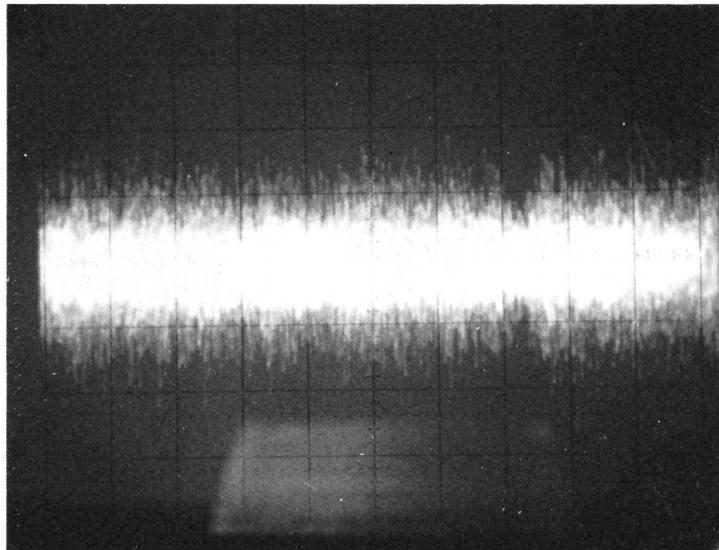


FIG. 2 Continuous Emission Signal (Sweep Rate—5 ms/cm)

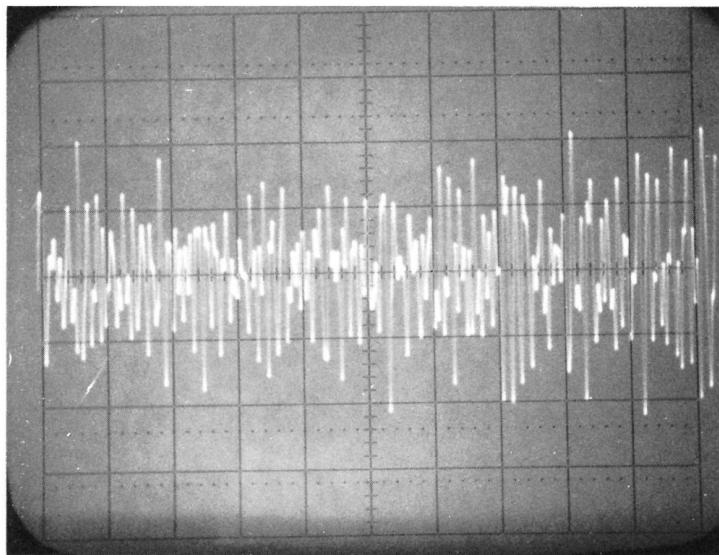


FIG. 3 Continuous Emission Signal (Sweep Rate—0.1 ms/cm)

interval, arrival time (Δt_{ij}), n —the time interval between the detected arrivals of an acoustic emission wave at the i th and j th sensors of a sensor array.

Kaiser effect, n —the absence of detectable acoustic emission at a fixed sensitivity level, until previously applied stress levels are exceeded.

DISCUSSION—Whether or not the effect is observed is material specific. The effect usually is not observed in materials containing developing flaws.

location accuracy, n —a value determined by comparison of the actual position of an AE source (or simulated AE source) to the computed location.

location, cluster, n —a location technique based upon a specified amount of AE activity located within a specified length or area, for example: 5 events within 12 linear inches or 12 square inches.

location, computed, n —a source location method based on algorithmic analysis of the difference in arrival times among sensors.

DISCUSSION—Several approaches to computed location are used, including linear location, planar location, three dimensional location, and adaptive location.

- (a) *linear location, n* —one dimensional source location requiring two or more channels.
- (b) *planar location, n* —two dimensional source location requiring three or more channels.
- (c) *3D location, n* —three dimensional source location requiring five or more channels.
- (d) *adaptive location, n* —source location by iterative use of simulated sources in combination with computed location.

location, continuous AE signal, n —a method of location based on continuous AE signals, as opposed to hit or difference in arrival time location methods.

DISCUSSION—This type of location is commonly used in leak location due to the presence of continuous emission. Some common types of continuous signal location methods include signal attenuation and correlation analysis methods.

(a) *signal attenuation-based source location, n*—a source location method that relies on the attenuation versus distance phenomenon of AE signals. By monitoring the AE signal magnitudes of the continuous signal at various points along the object, the source can be determined based on the highest magnitude or by interpolation or extrapolation of multiple readings.

(b) *correlation-based source location, n*—a source location method that compares the changing AE signal levels (usually waveform based amplitude analysis) at two or more points surrounding the source and determines the time displacement of these signals. The time displacement data can be used with conventional hit based location techniques to arrive at a solution for the source site.

location, source, n—any of several methods of evaluating AE data to determine the position on the structure from which the AE originated. Several approaches to source location are used, including zone location, computed location, and continuous location.

location, zone, n—any of several techniques for determining the general region of an acoustic emission source (for example, total AE counts, energy, hits, and so forth).

DISCUSSION—Several approaches to zone location are used, including independent channel zone location, first hit zone location, and arrival sequence zone location.

(a) *independent channel zone location, n*—a zone location technique that compares the gross amount of activity from each channel.

(b) *first-hit zone location, n*—a zone location technique that compares only activity from the channel first detecting the AE event.

(c) *arrival sequence zone location, n*—a zone location technique that compares the order of arrival among sensors.

logarithmic (acoustic emission) amplitude distribution $g(V)$, n—see **distribution, logarithmic (acoustic emission) amplitude**.

overload recovery time, n—an interval of nonlinear operation of an instrument caused by a signal with amplitude in excess of the instrument's linear operating range.

performance check, AE system, n—see **verification, AE system**.

processing capacity, n—the number of hits that can be processed at the processing speed before the system must interrupt data collection to clear buffers or otherwise prepare for accepting additional data.

processing speed, n—the sustained rate (hits/s), as a function of the parameter set and number of active channels, at which AE signals can be continuously processed by a system without interruption for data transport.

rate, event count (Ne), n—the time rate of the event count.

rearm delay time, n—see **time, rearm delay**.

resonant or narrowband AE sensor, n—an AE sensor which, when calibrated in accordance with Test Method E1106 or Practice E1781, exhibits a displacement or velocity response with one or more dominant frequency peaks such that it does not satisfy the definition of a broadband AE sensor.

ring-down count, n—see **count, acoustic emission, the preferred term**.

sensor, acoustic emission, n—a detection device, generally piezoelectric, that transforms the particle motion produced by an elastic wave into an electrical signal.

signal, acoustic emission (emission signal), n—an electrical signal obtained by detection of one or more acoustic emission events.

signal amplitude, acoustic emission, n—the peak voltage of the largest excursion attained by the signal waveform from an emission event.

signal overload level—that level above which operation ceases to be satisfactory as a result of signal distortion, overheating, or damage.

signal overload point, n—the maximum input signal amplitude at which the ratio of output to input is observed to remain within a prescribed linear operating range.

signal strength, n—the measured area of the rectified AE signal with units proportional to volt-sec.

DISCUSSION—The proportionality constant is specified by the AE instrument manufacturer.

signature, acoustic emission (signature), n—a characteristic set of reproducible attributes of acoustic emission signals associated with a specific test article as observed with a particular instrumentation system under specified test conditions.

stimulation, n—the application of a stimulus such as force, pressure, heat, and so forth, to a test article to cause activation of acoustic emission sources.

system examination threshold, n—the electronic instrument threshold (see **evaluation threshold**) which data will be detected.

transducers, acoustic emission, n—see **sensor, acoustic emission**.

verification, AE system (performance check, AE system), n—the process of testing an AE system to assure conformance to a specified level of performance or measurement accuracy. (This is usually carried out prior to, during or after, or combinations thereof, an AE examination with the AE system connected to the examination object, using a simulated or artificial acoustic emission source.)

voltage threshold, n—a voltage level on an electronic comparator such that signals with amplitudes larger than this level will be recognized. The voltage threshold may be user adjustable, fixed, or automatic floating.

waveguide, acoustic emission, n—a device that couples elastic energy from a structure or other test object to a remotely mounted sensor during AE monitoring. An example of an acoustic emission waveguide would be a solid wire of rod that is coupled at one end to a monitored structure, and to a sensor at the other end.

wideband-based (modal) AE techniques, n—AE techniques with wideband AE sensors that subject waveforms of the signals to combined time and frequency analysis to obtain

mode-based arrival times (for source location calculations) and modal amplitudes for potential source identification. Note that mode-based arrival times can also be obtained with resonant sensors, but only at certain experimentally determined frequencies.

Section C: Electromagnetic Testing (ET) Terms

The terms defined in Section C are the direct responsibility of Subcommittee E07.07 on Electromagnetic Methods.

absolute coil, *n*—a coil (or coils) that respond(s) to the total detected electric or magnetic properties, or both, of a part or section of the part without comparison to another section of the part or to another part.

absolute measurements, *n*—measurements made without a direct reference using an absolute coil in contrast to differential and comparative measurements. (See also **absolute coil**.)

absolute readout, *n*—the signal output of an absolute coil. (See also **absolute coil**.)

absolute system, *n*—a system that uses a coil assembly and associated electronics to measure the total electromagnetic properties of a part without direct comparison to another section of the part or to another part (see **absolute coil**.)

acceptance level, *n*—a level above or below which specimens are acceptable in contrast to rejection level.

acceptance limits, *n*—levels used in electromagnetic sorting which establish the group into which the material under examination belongs.

amplitude distortion, *n*—same as **harmonic distortion**.

amplitude response, *n*—that property of an examination system whereby the amplitude of the detected signal is measured without regard to phase. (See also **harmonic analysis and phase analysis**.)

annular coil clearance, *n*—the mean radial distance between adjacent coil assembly and part surface in electromagnetic encircling coil examination.

annular coils, *n*—see **encircling coils**.

artificial discontinuity, *n*—reference discontinuities, such as holes, grooves, or notches, that are introduced into a reference standard to provide accurately reproducible sensitivity levels for electromagnetic test equipment.

band pass filter, *n*—a wave filter having a single transmission band; neither of the cut-off frequencies being zero or infinity.

bobbin coil, *n*—see **ID coil**.

bucking coils, *n*—same as **differential coils**.

circumferential coils, *n*—see **encircling coils**.

coil, absolute, *n*—see **absolute coil**.

coil, reference, *n*—see **reference coil**.

coil size, *n*—the dimension of a coil, for example, length or diameter.

coil spacing, *n*—the axial distance between two encircling coils of a differential system.

coil, test, *n*—the section of the probe or coil assembly that excites or detects, or both, the electromagnetic field in the material under examination.

comparative measurements, *n*—measurements made in which the unbalance in the system is measured using comparator coils in contrast to differential and absolute measurements. (See also **comparator coils**.)

comparative readout, *n*—the signal output of comparator coils. (See also **comparator coils**.)

comparative system, *n*—a system that uses coil assemblies and associated electronics to detect any electric or magnetic condition, or both, that is not common to the specimen and the standard (see **comparator coils**).

comparator coils, *n*—two or more coils electrically connected in series opposition but arranged so that there is no mutual induction (coupling) between them such that any electric or magnetic condition, or both, that is not common to the specimen and the standard, will produce an unbalance in the system and thereby yield an indication.

conductivity, *n*—the intrinsic property of a particular material to carry electric current; it is commonly expressed in percent IACS (International Annealed Copper Standard) or MS/m (MegaSiemens/metre).

conformable, *adj*—refers to an ability of sensors or sensor arrays to conform to non-planar surfaces without significant effects on the measurement results, or with effects that are limited to a quantifiable bound.

coupling, *v*—two electric circuits are said to be coupled to each other when they have an impedance in common so that a current in one causes a voltage in the other.

cut-off level, *n*—same as **rejection level**.

defect resolution, *n*—a property of an examination system that enables the separation of indications due to defects in a sample that are located in proximity to each other.

depth of penetration, *n*—the depth at which the magnetic field strength or intensity of induced eddy currents has decreased to 37 % of its surface value. The depth of penetration depends upon the coil size, the frequency of the signal, and the conductivity and permeability of the material. It is related to the coil size at low frequencies and is equal to the skin depth at high frequencies. Related synonymous terms are standard depth of penetration and skin depth. (See also **skin effect**.)

depth of sensitivity, *n*—depth to which the sensor response to features or properties of interest exceeds a noise threshold.

Discussion—The depth of sensitivity can be larger or smaller than the depth of penetration since it incorporates a comparison between the signal obtained from a feature as well as measurement noise, whereas the depth of penetration refers to the decrease in field intensity with distance away from a test coil.

diamagnetic material—a material whose relative permeability is less than unity.

Discussion—The intrinsic induction B_i is oppositely directed to the applied magnetizing force H .

differential coils, *n*—two or more coils electrically connected in series opposition such that any electric or magnetic condition, or both, that is not common to the areas of a specimen being electromagnetically examined will produce an unbalance in the system and thereby yield an indication.

differential measurements, *n*—measurements made in which the imbalance in the system is measured using differential coils in contrast to absolute and comparative measurements. (See also **differential coils**.)

differential readout, *n*—the signal output of differential coils. (See also **differential coils**.)

differential signal, *n*—an output signal that is proportional to the rate of change of the input signal.

differential system, *n*—an electromagnetic examination system that uses coil assemblies and associated electronics to detect an electric or magnetic condition, or both, that is not common to the areas of the specimen being examined. (See also **differential coils**.)

drive winding, *n*—a conductor pattern or coil that produces a magnetic field that couples to the material being examined.

Discussion—The drive winding can have various geometries, including: (1) a simple linear conductor that is placed adjacent to a one-dimensional array of sensing elements; (2) one or multiple conducting loops driven to create a complex field pattern; and (3) multiple conducting loops with a separate loop for each sensing element.

eddy current, *n*—an electrical current caused to flow in a conductor by the time or space variation, or both, of an applied magnetic field.

eddy current testing, *n*—a nondestructive testing method in which eddy current flow is induced in the material under examination.

Discussion—Changes in the flow caused by variations in the specimen are reflected into a nearby coil, coils, Hall effect device, magnetoresistive sensor or other magnetic field sensor for subsequent analysis by suitable instrumentation and techniques.

edge effect, *n*—the disturbance of the magnetic field and eddy-currents due to the proximity of an abrupt change in specimen geometry (edge). This effect generally results in the masking of discontinuities within the affected region. (This effect is also termed the **end effect**.)

effective depth of penetration (EDP), *n*—for (a) thickness, the minimum depth beyond which an examination system can no longer reliably detect a further increase in specimen thickness, or (b) defects, the limit for reliably detecting

metallurgical or mechanical discontinuities by way of conventional continuous wave (CW) eddy current instrumentation and sensors. The EDP point is approximately three times the standard depth of penetration.

effective permeability, *n*—a hypothetical quantity that describes the magnetic permeability that is experienced under a given set of physical conditions such as a cylindrical specimen in an encircling coil at a specific frequency. This quantity may be different from the permeability of the particular metal being examined in that it takes into account such things as the geometry of the part, the relative position of the encircling coil, and characteristics of the magnetic field.

electrical center, *n*—the center established by the electromagnetic field distribution within a test coil. A constant intensity signal, irrespective of the circumferential position of a discontinuity, is indicative of electrical centering. The electrical center may be different from the physical center of the test coil.

electromagnetic testing, *n*—a nondestructive test method for materials, including magnetic materials, that uses electromagnetic energy having frequencies less than those of visible light to yield information regarding the quality of examined material.

encircling coils, *n*—coil(s) or coil assembly that surround(s) the part to be examined. Coils of this type are also referred to as annular, circumferential, or feed-through coils.

end effect, *n*—see **edge effect**.

end effect, *n*—the loss in sensitivity to discontinuities located near the extreme ends of the tube as the ends of the tube enter or leave the test coil.

feed-through coils, *n*—see **encircling coils**.

ferromagnetic material, *n*—a material that, in general, exhibits the phenomena of magnetic hysteresis and saturation, and whose permeability is dependent on the magnetizing force.

fill factor, *n*—(a) for encircling coil electromagnetic testing, the ratio of the cross-sectional area of the specimen to the effective cross-sectional core area of the primary encircling coil (outside diameter of coil form, not inside diameter which is adjacent to specimen); (b) for internal probe electromagnetic testing, the ratio of the effective cross-sectional area of the primary internal probe coil to the cross-sectional area of the tube interior.

filter, *n*—a network that passes electromagnetic wave energy over a described range of frequencies and attenuates energy at all other frequencies.

gate, *n*—same as **rejection level**.

harmonic analysis, *n*—an analytical technique whereby the amplitude or phase, or both, of the frequency components of a complex periodic signal is determined.

harmonic distortion, *n*—nonlinear distortion characterized by the appearance in the output of harmonics other than the fundamental component when the input wave is sinusoidal.

IACS, *n*—the International Annealed Copper Standard; an international standard of electrical conductivity.

ID coil, *n*—a coil or coil assembly used for electromagnetic testing by insertion into the examination piece as in the case of an inside probe for tubing. Coils of this type are also referred to as inside coils, inserted coils, or bobbin coils.

impedance, *n*—the total opposition that a circuit presents to the flow of an alternating current, specifically the complex quotient of voltage divided by current.

impedance analysis, *n*—an analytical method that consists of correlating changes in the amplitude, phase, or quadrature components, or all of these, of a complex signal voltage to the electromagnetic conditions within a specimen.

impedance plane diagram, *n*—a graphical representation of the locus of points, indicating the variations in the impedance of a test coil as a function of basic examination parameters.

incremental permeability, *n*—the ratio of the change in magnetic induction to the corresponding change in magnetizing force when the mean induction differs from zero.

initial permeability, *n*—the slope of the induction curve at zero magnetizing force as the specimen is being removed from a demagnetizing condition (slope at origin of BH curve before hysteresis is observed).

inserted coil, *n*—see **ID coil**.

inside coil, *n*—see **ID coil**.

insulating shims, *n*—conformable and substantially non-conducting or insulating foils that are used to measure effects of small lift-off excursions on sensor response.

lift-off, *n*—normal distance from the plane of the sensor coil or winding conductors to the surface of the conducting material under examination.

lift-off effect, *n*—the effect observed in an examination system output due to a change in magnetic coupling between a specimen and a probe coil whenever the distance between them is varied.

magnetic history, *n*—magnetic condition of a ferromagnetic part under examination based on previous exposures to magnetic fields.

magnetic leakage flux, *n*—the excursion of magnetic lines of force from the surface of a specimen.

magnetic saturation, *n*—that degree of magnetization where a further increase in magnetizing force produces no significant increase in magnetic flux density (permeability) in a specimen.

model for sensor response, *n*—a relation between the response of the sensor (for example, impedance magnitude and phase or real and imaginary parts) and properties of interest (for example, electrical conductivity, magnetic permeability, lift-off, and material thickness) for at least one sensing element and at least one drive winding.

DISCUSSION—These model responses may be obtained from database tables and may be analysis-based or empirical.

modulation analysis, *n*—an analytical method used in electromagnetic testing that separates responses due to various factors influencing the total magnetic field by separating and interpreting, individually, frequencies or frequency bands in the modulation envelope of the (carrier frequency) signal.

noise, *n*—any nonrelevant signal that tends to interfere with the normal reception or processing of a desired flaw signal. It should be noted that such noise signals may be generated by inhomogeneities in the inspected part that are not detrimental to the end use of the part.

nonferromagnetic material, *n*—a material that is not magnetizable and hence, essentially not affected by magnetic fields. This would include paramagnetic materials and diamagnetic materials.

normal permeability, *n*—the ratio of the induction (when cyclically made to change symmetrically about zero) to the corresponding change in magnetizing force.

off-line testing, *n*—eddy current tests conducted on equipment that includes the test coil and means to propel individual tubes under examination through the coil at appropriate speeds and conditions.

on-line testing, *n*—eddy current tests conducted on equipment that includes the test coil and means to propel tubes under examination through the coil at appropriate speeds and conditions as an integral part of a continuous tube manufacturing sequence.

optimum frequency, *n*—that frequency which provides the largest signal-to-noise ratio obtainable for the detection of an individual material property. A different optimum frequency may be associated with each material property.

paramagnetic material, *n*—a material that has a relative permeability slightly greater than unity and that is practically independent of the magnetizing force.

permeability, a-c, *n*—a generic term used to express various dynamic relationships between magnetic induction, *B*, and magnetizing force, *H*, for magnetic material subjected to a cyclic excitation by alternating or pulsating current. The values of a-c permeability obtained for a given material depend fundamentally upon the excursion limits of dynamic excitation and induction, the method and conditions of measurement, and also upon such factors as resistivity, thickness of laminations, frequency of excitation, and so forth.

DISCUSSION—The numerical value for any permeability is meaningless unless the corresponding *B* or *H* excitation level is specified. For incremental permeabilities, not only must the corresponding d-c *B* or *H* excitation level be specified, but also the dynamic range (ΔB or ΔH).

permeability, d-c, *n*—permeability is a general term used to express relationships between magnetic induction, *B*, and magnetizing force, *H*, under various conditions of magnetic excitation. These relationships are either (1) absolute permeability, which in general is the quotient of a change in

magnetic induction divided by the corresponding change in magnetizing force, or (2) relative permeability, which is the ratio of the absolute permeability to the magnetic constant (γ_m).

DISCUSSION—The magnetic constant γ_m is a scalar quantity differing in value and uniquely determined by each electromagnetic system of units. In the unratinalized cgs system γ_m is 1 gauss/oersted and the mksa rationalized system $\gamma_m = 4\pi \times 10^{-7}$ H/m.

DISCUSSION—Relative permeability is a pure number which is the same in all unit systems. The value and dimension of absolute permeability depends on the system of units employed.

DISCUSSION—For any ferromagnetic material, permeability is a function of the degree of magnetization. However, initial permeability, μ_o , and maximum permeability, μ_m , are unique values for a given specimen under specified conditions.

DISCUSSION—Except for initial permeability, μ_o , a numerical value for any of the d-c permeabilities is meaningless unless the corresponding B or H excitation level is specified.

DISCUSSION—For the incremental permeabilities $\mu\Delta$ and $\mu\Delta i$, a numerical value is meaningless unless both the corresponding values of mean excitation level (B or H) and the excursion range (ΔB or ΔH) are specified.

phase analysis, *n*—an analytical technique that discriminates between variables in a part undergoing electromagnetic testing part by the different phase angle changes that these conditions produce in a signal. (See also **phase detection**.)

phase angle, *n*—the angular equivalent of the time displacement between corresponding points on two sine waves of the same frequency.

phase detection, *n*—the derivation of a signal whose amplitude is a function of the phase angle between two alternating currents, one of which is used as a reference.

phase-sensitive system, *n*—a system whose output signal is dependent on the phase relationship between the voltage returned from a pickup or sensing coil and a reference voltage.

phase shift, *n*—a change in the phase relationship between two alternating quantities of the same frequency.

probe coil, *n*—a small coil or coil assembly that is placed on or near the surface of examination objects.

probe coil clearance, *n*—the perpendicular distance between adjacent surfaces of the probe and examination part; also lift-off.

recovery time, *n*—the time required for an examination system to return to its original state after it has received a signal.

reference coil, *n*—a coil or probe, which may be used in conjunction with the appropriate material, to electrically balance a comparative system.

rejection level, *n*—the value established for a signal above or below which specimens are rejectable, or otherwise distinguished from the remaining specimens.

selectivity, *n*—the characteristic of an examination system that is a measure of the extent to which an instrument is capable of differentiating between the desired signal and disturbances of other frequencies or phases.

sensitivity control, *n*—the control in the instrument that adjusts the amplifier gain, and is one of the factors that determines the capacity to detect discontinuities.

signal gradient, *n*—same as **differential readout**.

signal-to-noise ratio, *n*—the ratio of values to signal (response containing relevant information) to that of noise (response containing nonrelevant information).

skin depth, *n*—see **depth of penetration**.

skin effect, *n*—the phenomenon wherein the depth of penetration of electric currents into a conductor decreases as the frequency of the current is increased. At very high frequencies, the current flow is restricted to an extremely thin outer layer of the conductor. (See also **depth of penetration**.)

spatial half-wavelength, *n*—spacing between the conductors of a linear drive winding with current flow in opposite directions.

DISCUSSION—This spacing affects the depth of sensitivity. The spatial wavelength equals two times this spacing. For a circular drive winding, the effective spatial half-wavelength is equal to the drive winding diameter.

speed effect, *n*—the phenomenon in electromagnetic testing of which the evidence is a change in the signal voltage resulting from a change in the relative motion between the specimen and a test coil assembly.

standard depth of penetration (SDP), *n*—see **depth of penetration**.

system performance verification, *n*—the use of a measurement of one or more response values, typically physical property values, for a reference part to confirm that the response values are within specified tolerances to validate the system standardization and verify proper instrument operation.

test coil, *n*—the section of the coil assembly that examines the material under examination in a comparative system; the coil used to examine the material in an absolute or differential comparative system.

test quality level, *n*—see **rejection level**.

three way sort, *n*—an electromagnetic sort based on a signal response from the material under examination above or below two levels established by three or more calibration standards.

threshold level, *n*—the setting of an instrument that causes it to register only those changes in response greater or less than a specified magnitude.

threshold setting, *n*—the setting of the instrument that causes it to register only those changes in eddy-current response greater than a specified magnitude.

DISCUSSION—Sensitivity and threshold settings usually are indicated by arbitrary numbers on the control panel of the testing instrument.

These numerical settings differ among instruments of different types. It is, therefore, not proper to translate a numerical setting on one instrument to that of another type. Even among instruments of the same design and from the same manufacturer, sensitivity and threshold settings may vary slightly when detecting the same discontinuity. Therefore, undue emphasis on the numerical value of sensitivity and threshold settings is not justified.

transducer, *n*—an electromagnetic device for converting electrical energy into magnetic or mechanical energy and vice versa.

tubing acceptance standard, *n*—a tube used to establish the acceptance level with artificial discontinuities as specified in the applicable product standard.

Section D: Gamma- and X-Radiologic Testing (RT) Terms

The terms defined in Section D are the direct responsibility of Subcommittee E07.01 on Radiology (X and Gamma) Methods. Additional radiologic testing terms are found in Section H.

absorbed dose, *n*—the amount of energy imparted by ionizing radiation per unit mass of irradiated matter. Denoted by “rad;” 1 rad = 0.01 J/kg. SI unit is “gray;” 1 gray = 1 J/kg.

absorbed dose rate, *n*—the absorbed dose per unit of time; rads/s. SI unit, grays/s.

absorption, *n*—the process whereby the incident particles or photons of radiation are reduced in number or energy as they pass through matter.

accelerating potential, *n*—the difference in electric potential between the cathode and anode in an X-ray tube through which a charged particle is accelerated; usually expressed in units of kV or MV.

activation, *n*—in neutron radiography, the process of causing a substance to become artificially radioactive by subjecting it to bombardment by neutrons or other particles.

acute radiation syndrome, *n*—the immediate effects of a short term, whole body overexposure of a person to ionizing radiation. These effects include nausea and vomiting, malaise, increased temperature, and blood changes.

alphanumeric, *n*—term pertaining to both numbers and alphabetical characters, typically used to designate a device capable of handling both types of characters.

alpha particle, *n*—a positively charged particle emitted by certain radio-nuclides. It consists of two protons and two neutrons, and is identical to the nucleus of a helium atom.

amorphous selenium (a-Se) radiation detector array, *n*—an array employing a biased amorphous selenium photodiode that directly converts incident radiation into electrical charge which can then be read to form a digital image.

amorphous silicon (a-Si) detector, *n*—an amorphous silicon (a-Si) radiation detector consists of a glass substrate with an array of photodiodes and thin film transistors; the photodiodes are illuminated by light photons emitted from a scintillator which is irradiated by X-rays or gamma rays, and is in intimate contact with the photodiode array.

two-way sort, *n*—an electromagnetic sort based on a signal response from the material under examination above or below a level established by two or more calibration standards.

wobble, *n*—an effect that produces variations in coil spacing (operational lift-off) due to lateral motion of the specimen in passing through an encircling coil.

analog image, *n*—an image produced by a continuously variable physical process (for example, exposure of film).

analog to digital converter (a/d), *n*—a device that changes an analog signal to a digital representation of the signal.

anode, *n*—the positive electrode of a discharge tube. In an X-ray tube, the anode carries the target.

anode current, *n*—the electrons passing from the cathode to the anode in an X-ray tube, minus the small loss incurred by the back scattered fraction.

aperture, *n*—an opening in material, space, or time over which an element is considered to be active.

area of interest (AOI), *n*—the portion of the radiograph or digital image that is to be evaluated and interpreted.

array processor, *n*—a special purpose logical processing device that performs extremely fast mathematical operation on digital arrays.

artifact, *n*—spurious indication on a radiograph arising from, but not limited to, faulty manufacture, storage, handling, exposure, or processing.

attenuation (X-ray), *n*—reduction of radiation beam intensity caused by the interactions of the beam with the matter through which it passes.

autoradiograph, *n*—the image of an object containing a radioelement obtained, on a recording medium, by means of its own radiation.

back scattered radiation, *n*—radiation which is scattered more than 90° with respect to the incident beam, that is, backward in the general direction of the radiation source.

bad pixel, *n*—a DDA pixel that does not conform to a specified performance.

DISCUSSION—Bad pixel criteria may include, but are not limited to, non-responding, over-responding, under-responding, noisy, non-uniform, non-persistent, or bad neighborhood; non-persistent bad pixels may have flickering or poor lag performance.

bad pixel map, *n*—a binary image that represents the physical locations of bad pixels on a DDA.

basic spatial detector resolution (SR_b^{detector}), *n*—a measure of the ability to separate spatial details in the detector plane using a radiographic detector without using geometric magnification.

DISCUSSION—Equal to one-half of the inherent detector unsharpness (U_{detector}).

basic spatial image resolution (SR_b^{image}), *n*—a measure of the ability of a radiographic system to separate spatial details in the object plane.

DISCUSSION—Equal to one-half of the image unsharpness (U_{im}).

betatron, *n*—an electron accelerator in which acceleration is provided by a special magnetic field constraining the electrons to a circular orbit. This type of equipment usually operates at energies between 10 and 31 MEV.

bit depth, *n*—the number of bits used to store a value.

DISCUSSION—Typically used to describe the pixel value range in digital radiography, for example, a system with a bit depth of 16 provides 2^{16} (= 65 536) possible pixel values.

blocking or masking, *v*—surrounding specimens or covering their sections with absorptive material.

blooming, *n*—*in radiographic imaging*, an undesirable artifact brought about by exceeding the allowable input brightness for the detector, causing signal to leak into adjacent areas, producing a degraded non-homogeneous image artifact near to the high exposure area.

blow back, *n*—the enlargement of a minified radiograph to its original size by use of an optical direct reader.

cassette, *n*—a light-tight container for holding radiographic recording media during exposure, for example, film, with or without intensifying or conversion screens.

characteristic curve, *n*—the plot of density versus log of exposure or of relative exposure. (Also called the D-log E curve or the *H* and D curve.)

cine-radiography, *n*—the production of a series of radiographs that can be viewed rapidly in sequence, thus creating an illusion of continuity.

collimator, *n*—a device of radiation absorbent material intended for defining the direction and angular divergence of the radiation beam.

composite viewing, *n*—the viewing of two or more superimposed radiographs from a multiple film exposure.

compton scatter radiation, *n*—the scattered X-ray or gamma ray which results from the inelastic scattering of an incident X-ray or gamma ray on an electron. Since the ejected electron has short range in most materials, it is not considered part of the scattered radiation.

computed radiography (CR) (Photostimulable Luminescence (PSL) Method), *n*—a two step radiographic imaging process; first, a storage phosphor imaging plate (IP) is

exposed by penetrating radiation; second, the luminescence from the IP's photostimulable luminescent phosphor is stimulated, detected, digitized, and displayed on an image display monitor.

computed tomography (CT), *n*—a nondestructive examination technique that captures radiographic projections of an object at various rotational angles, which are mathematically reconstructed to produce a three-dimensional volume data set or one or more two-dimensional cross-sectional images, where each voxel value represents the attenuation coefficient of the incident radiation at a specific location within the object.

constant potential, *n*—a method of electrically generating x-rays by placing a constant potential electrical source (voltage and current) across the x-ray tube anode and cathode; the ripple component of the constant potential electrical source is typically less than 2.0 %.

contrast-to-noise ratio (CNR), *n*—quotient of the difference of the mean linear pixel values between two image areas (Digital image contrast) and the standard deviation of the linear pixel values.

contrast sensitivity, *n*—a measure of the minimum percentage change in an object which produces a perceptible density/brightness change in the radiological image.

contrast stretch, *n*—a function that operates on the greyscale values in an image to increase or decrease image contrast.

corrected digital radiograph, *n*—an image whose pixels have been adjusted due to the application of an offset and gain correction, bad pixel correction, or any other type of image correction.

definition, image definition, *n*—the sharpness of delineation of image details in a radiograph. Generally used qualitatively.

densitometer, *n*—a device for measuring the optical density of radiograph film.

density (film), *n*—see **film density**.

density comparison strip, *n*—alternative term for **step-wedge comparison film**.

detector unsharpness (U_{detector}), *n*—two times the Basic Spatial Detector Resolution (SR_b^{detector}).

digital, *n*—the representation of data or physical quantities in the form of discrete codes, such as numerical characters, rather than a continuous stream.

digital detector array (DDA), *n*—an electronic device that converts ionizing or penetrating radiation into a discrete array of analog signals which are subsequently digitized and transferred to a computer for display as a digital image corresponding to the radiologic energy pattern imparted upon the input region of the device.

digital driving level (DDL), *n*—a digital value that when given as input to a display system produces a luminance.

digital image, *n*—an image composed of discrete pixels each of which is characterized by a digitally represented luminescence level.

digital image acquisition system, *n*—a system of electronic components which, by either directly detecting radiation or converting analog radiation detection information, creates an image of the spatial radiation intensity map comprised of an array of discrete digital intensity values (see **pixel**).

digital image enhancement, *n*—any operation used for the purpose of enhancing some aspect of the original image.

digital image processing system, *n*—a system which uses algorithms to process digital image data.

digital magnification (zoom), *n*—any change in the pixel mapping ratio between the captured image and the displayed image, effectively making objects in the image appear larger or smaller.

digital radiography, *n*—all radiography methods whereby images are in a digital format.

DISCUSSION—For example CR, CT, DDA, and digitized film.

digitize (for radiology), *n*—the act of converting an analog image or signal to a digital presentation.

dynamic range (for radiography), *n*—the span of signal intensity that defines the system's range of performance.

equivalent I.Q.I. sensitivity, *n*—that thickness of I.Q.I. expressed as a percentage of the section thickness radiologically examined in which a 2T hole or 2 % wire size equivalent would be visible under the same radiological conditions.

equivalent penetrometer sensitivity, *n*—that thickness of penetrometer, expressed as a percentage of the section thickness radiographed, in which a 2T hole would be visible under the same radiographic conditions.

erasable optical medium, *n*—an erasable and rewritable storage medium where the digital data is represented by the degree of reflectivity of the medium recording layer; the data can be altered.

exposure, radiographic exposure, *n*—the subjection of a recording medium to radiation for the purpose of producing a latent image. Radiographic exposure is commonly expressed in terms of milliampere-seconds or millicurie-hours for a known source-to-film distance.

exposure table, *n*—a summary of values of radiographic exposures suitable for the different thicknesses of a specified material.

fast scan direction (CR), *n*—the laser sweep direction across an imaging plate in a CR scanner.

DISCUSSION—Also known as the scan axis; orthogonal to the slow scan direction.

film contrast, *n*—also called gradient: a quantitative expression of the slope or steepness of the characteristic curve of a film; that property of a radiographic film material which is

related to the magnitude of the density difference resulting from a given difference of the logarithmic exposure dose.

film density, *n*—the quantitative measure of diffuse optical light transmission (optical density, blackening) through a developed film.

$$D = \log(I_0/I)$$

where:

D = optical density,
 I_0 = light intensity incident on the film, and
 I = light intensity transmitted.

film speed, *n*—a numerical value expressing the response of an image receptor to the energy of penetrating radiation under specified conditions.

filter, *n*—uniform layer of material, usually of higher atomic number than the specimen, placed between the radiation source and the film for the purpose of preferentially absorbing the softer radiations.

fluorescence, *n*—the emission of light by a substance as a result of the absorption of some other radiation of shorter wavelengths only as long as the stimulus producing it is maintained.

fluorescent screen, *n*—alternative term for **intensifying screen (b)**.

fluoroscopy, *n*—the visual observation on a fluorescent screen of the image of an object exposed to penetrating, ionizing radiation.

focal spot, *n*—for x-ray generators, that area of the anode (target) of an x-ray tube which emits x-ray when bombarded with electrons.

fog, *n*—a general term used to denote any increase in optical density of a processed photographic emulsion caused by anything other than direct action of the image forming radiation and due to one or more of the following:

(a) **aging**, *v*—deterioration, before or after exposure, or both, resulting from a recording medium that has been stored for too long a period of time, or other improper conditions.

(b) **base**, *n*—the minimum uniform density inherent in a processed emulsion without prior exposure.

(c) **chemical**, *n*—resulting from unwanted reactions during chemical processing.

(d) **dichroic**, *adj*—characterized by the production of colloidal silver within the developed sensitive layer.

(e) **exposure**, *n*—arising from any unwanted exposure of an emulsion to ionizing radiation or light at any time between manufacture and final fixing.

(f) **oxidation**, *n*—caused by exposure to air during developing.

(g) **photographic**, *adj*—arising solely from the properties of an emulsion and the processing conditions, for example, the total effect of inherent fog and chemical fog.

(h) threshold, n—the minimum uniform density inherent in a processed emulsion without prior exposure.

fog density, n—a general term used to denote any increase in the optical density of a processed film caused by anything other than the direct action of the image-forming radiation.

forward scattered radiation, n—radiation which is scattered less than 90° with respect to the incident beam, that is, forward in the general direction of the radiation source.

gain correction, n—the process of normalizing each detector pixel response in the presence of ionizing radiation.

DISCUSSION—Produces an image with uniform pixel values in the absence of a specimen and will compensate for the effects of beam inhomogeneity and differing pixel sensitivity, usually used in combination with offset correction.

gamma-radiography, n—a technique of producing radiographs using gamma-rays.

gamma ray, n—electromagnetic penetrating radiation having its origin in the decay of a radioactive nucleus.

geometric unsharpness (U_g)³, n—the penumbral shadow in a radiological image which is dependent upon (1) the radiation source dimensions, (2) the source to object distance, and (3) object to detector distance.

graininess, n—the visual impression of irregularity of silver deposit in a processed film.

half-life, n—the time required for one half of a given number of radioactive atoms to undergo decay.

half-value layer (HVL), n—the thickness of an absorbing material required to reduce the intensity of a beam of incident radiation to one half of its original intensity.

half-value thickness, n—the thickness of a specified substance which, when introduced into the path of a given beam of radiation, reduces its intensity to one half.

image data file, n—a digital file containing radiological image and text information.

image definition, n—see **definition**.

image processing, n—a method whereby digital image data is transformed through a mathematical function.

image quality indicator (IQI), n—*in industrial radiology*, a device or combination of devices whose demonstrated image or images provide visual or quantitative data, or both, to determine radiologic quality and sensitivity. Also known as a penetrometer (disparaged).

DISCUSSION—It is not intended for use in judging size nor establishing acceptance limits of discontinuities.

iSR_b image, n—the interpolated basic spatial resolution of the imaging system, which corresponds to the dimension of the smallest feature that can be resolved at a modulation of twenty percent with geometric magnification.

NOTE 3—Typical units of resolution measurement are micrometers.

³ Mathematical derivation of geometric unsharpness is provided in Guide E94.

iSR_b detector, n—the interpolated basic spatial resolution of a detector, which corresponds to the dimension of the smallest feature that can be resolved at a modulation of 20 % without geometric magnification.

NOTE 4—Typical units of resolution measurement are micrometers.

indication, n—the response or evidence from a nondestructive examination that requires interpretation to determine relevance.

inherent detector unsharpness ($U_{detector}$), n—the blurring of test object features in a radiographic image (primarily due to detector properties), with the object measured adjacent to the detector plane without geometric magnification.

DISCUSSION—Equal to two times the $SR_b^{detector}$.

intensifying screen, n—a material that converts a part of the radiographic energy into light or electrons and that, when in contact with a recording medium during exposure, improves the quality of the radiograph, or reduces the exposure time required to produce a radiograph, or both. Three kinds of screens in common use are:

(a) metal screen, n—a screen consisting of dense metal (usually lead) or of a dense metal compound (for example, lead oxide) that emits primary electrons when exposed to X- or gamma-rays.

(b) fluorescent screen, n—a screen consisting of a coating of phosphors which fluoresces when exposed to X or gamma radiation.

(c) fluorescent-metallic screen, n—a screen consisting of a metallic foil (usually lead) coated with a material that fluoresces when exposed to X or gamma radiation. The coated surface is placed next to the film to provide fluorescence; the metal functions as a normal metal screen.

IQI sensitivity, n—*in radiography*, the minimum discernible image and the designated hole in the plaque-type, or the designated wire image in the wire type image quality indicator.

keV (kilo electron volt), n—a unit of energy equal to 1000 electron volts, that is, the energy gained by an electron or proton moving through a potential difference of 1000 volts in a vacuum.

DISCUSSION—A unit of the maximum photon energy of a bremsstrahlung X-ray spectrum, when used to describe an X-ray source.

kV (kilo volts), n—a unit of electrical potential difference equal to 1000 volts.

DISCUSSION—Often used to express the accelerating potential of an electrostatic X-ray source, such as an X-ray tube

kVp (kilo volts peak), n—a unit used to express the peak voltage of a time varying electrical potential of an X-ray source, such as a rectified X-ray generator system.

latent image, n—a condition produced and persisting in the image receptor by exposure to radiation and able to be converted into a visible image by processing.

lead screen, n—see **intensifying screen (a)**.

line pairs per millimetre, *n*—a measure of the spatial resolution of an image conversion device. A line pair test pattern consisting of one or more pairs of equal width, high contrast lines and spaces is utilized to determine the maximum density of lines and spaces that can be successfully imaged. The value is expressed in line pairs per millimetre.

line pair test pattern, *n*—a pattern of one or more pairs of objects with high contrast lines of equal width and equal spacing. The pattern is used with an imaging device to measure spatial resolution.

linear accelerator, *n*—an electron generator in which the acceleration of the particles is connected with the propagation of a high-frequency field inside a linear or corrugated waveguide.

linear digital image contrast, *n*—mean linear pixel value difference between any two regions of interest within a digital image. Linear digital image contrast = $PV2 - PV1$, where $PV2$ is the mean linear pixel value of region of interest “2” and $PV1$ is the mean linear pixel value of region of interest “1” on a digital image.

linear pixel value, *n*—the numeric value of a pixel in a digital image, which is directly proportional to the radiation dose of the corresponding detector element where a zero value represents the unexposed detector.

location marker, *n*—a number or letter made of lead (Pb) or other highly radiation attenuative material that is placed on an object to provide traceability between a specific area on the image and the part.

low-energy gamma radiation, *n*—gamma radiation having energy less than 200 keV.

luminosity, *n*—a measure of emitted light intensity.

mA (milliampere), *n*—a unit of current equal to 0.001 amperes, used to express the tube current of an X-ray tube.

magnetic storage medium, *n*—a storage medium that uses magnetic properties (magnetic dipoles) to store digital data (for example, a moving drum, disk, or tape or a static core or film).

MeV (mega electron volt), *n*—a unit of energy equal to 1 000 000 electron volts, that is, the energy gained by an electron or proton moving through a potential difference of 1 000 000 volts in a vacuum.

DISCUSSION—A unit of the maximum photon energy of a bremsstrahlung X-ray spectrum, when used to describe an X-ray source.

micro focus X-ray tube, *n*—an X-ray tube having an effective focal spot size not greater than 100 μm .

milliamperes (mA), *n*—the technical term is **tube current** and is defined as the current passing between the cathode and anode during the operation of an x-ray tube, measured in milliamperes (mA) and usually taken as a measure of x-ray intensity.

minifocus X-ray tube, *n*—an X-ray tube having an effective focal spot size between 100 and 400 μm .

MV (mega volt), *n*—unit of electrical potential difference equal to 1 000 000 volts.

DISCUSSION—Often used to express the accelerating potential of an electrostatic X-ray source; when used to describe an accelerator-based X-ray source, the accelerating potential that would produce the same electron energy and X-ray spectrum if an electrostatic source were available

MVp (mega volts peak), *n*—a term commonly used to express the equivalent electrostatic accelerating potential of an accelerator based X-ray source, see **MV (mega volt)**.

DISCUSSION—While not a technically correct term, MVp is used as an analog to kVp in the mega volt X-ray regime.

net density, *n*—total density less fog and support (film base) density.

neutron radiography (NRT), *n*—a process of making an image of the internal details of an object by the selective attenuation of a neutron beam by the object.

noise, *n*—the data present in a radiological measurement which is not directly correlated with the degree of radiation attenuation by the object being examined.

non-erasable optical data, *n*—a non-erasable, non-rewriteable storage medium where the digital data is represented by the degree of reflectivity of the medium's recording layer. The data cannot be altered.

nonscreen-type film (direct-type film), *n*—X-ray film designed for use with or without metal screens, but not intended for use with salt screens.

normalized signal-to-noise ratio (SNR_N), *n*—the SNR normalized to a prescribed detection area of a 100 micron diameter circle, or an 88.6 micron \times 88.6 micron square.

DISCUSSION—SNR_N is calculated using the measured basic spatial resolution SR_b, as measured directly in the digital image and calculated by $\text{SNR}_N = \text{SNR} \times (88.6 \mu\text{m} / \text{SR}_b)$.

nuclear activity, *n*—the number of disintegrations occurring in a given quantity of material per unit of time. “Curie” is the unit of measurement. One curie is equivalent to 3.7×10^{10} disintegrations per second.

object-detector distance (ODD), *n*—the distance between the surface of the source side of the object and the radiation detector.

object-detector distance for computed tomography (ODD_{CT}), *n*—the distance between the center of rotation of the object and the radiation detector.

object-film distance, *n*—the distance between the surface of the source side object and the plane of the recording medium.

DISCUSSION—In the case where the recording medium is placed directly in contact with the object being examined, the distance is equal to the thickness of the object.

offset correction, *n*—the mathematical process of subtracting the response of each pixel, in the absence of ionizing radiation, from an acquired image.

optical density, *n*—the degree of opacity of a translucent medium (darkening of film) expressed as follows:

$$OD = \log(I_o/I) \quad (2)$$

where:

OD = optical density,

I_o = light intensity incident on the film, and

I = light intensity transmitted through the film.

optical line pair test pattern, *n*—see **line pair test pattern**.

pair production, *n*—the process whereby a gamma photon with energy greater than 1.02 MeV is converted directly into matter in the form of an electron-positron pair. Subsequent annihilation of the positron results in the production of two 0.511 MeV gamma photons.

pencil beam, *n*—a radiation beam which has little divergence, usually created by collimating an intense source of radiation.

penetrometer, *n*—alternative term for **image quality indicator**.

penetrometer sensitivity, *n*—alternative term for **IQI sensitivity**.

phosphor, *n*—any substance that can be stimulated to emit light by incident radiation.

photo fluorography, *n*—a photograph of the image formed on a fluorescent screen.

photostimulable luminescence, *n*—the physical phenomenon of phosphors absorbing incident ionizing radiation, storing the energy in quasi-stable states and emitting luminescent radiation proportional to the absorbed energy when stimulated by radiation of a different wavelength.

photostimulable luminescent phosphor, *n*—a phosphor capable of storing a latent radiological image which upon laser stimulation will generate luminescence proportional to the radiation intensity.

pixel, *n*—the smallest addressable element in an electronic image.

pixel, display size, *n*—the dimensions of the smallest picture element comprising the displayed image, given in terms of the imaged object's dimensions being represented by the element.

pixel size, *n*—the length and width of a pixel.

pixel value (PV), *n*—the numeric value of a pixel in a digital image.

primary radiation, *n*—radiation coming directly from the source.

radiograph, *n*—any retrievable image produced by penetrating radiation passing through a material being examined.

DISCUSSION—This may be hard copy, film, or a digital image.

radiographic contrast, *n*—the difference in density from one area to another of a radiograph, resulting from the combination of film contrast and subject contrast.

radiographic equivalence factor, *n*—that factor by which the thickness of a material must be multiplied in order to determine what thickness of a standard material (often steel) will have the same absorption.

radiographic exposure, *n*—see **exposure**.

radiographic inspection, *n*—the use of X-rays or nuclear radiation, or both, to detect discontinuities in material, and to present their images on a recording medium.

radiographic quality, *n*—a qualitative term used to describe the capability of a radiograph to show flaws in the area under examination.

radiographic sensitivity, *n*—a general or qualitative term referring to the size of the smallest detail that can be seen on a radiograph, or the ease with which details can be seen.

radiography, *n*—the art, act, or process of making radiographs.

radiological examination, *n*—the use of penetrating ionizing radiation to display images for the detection of discontinuities or to help ensure integrity of the part.

radiology, *n*—the science and application of X-rays, gamma rays, neutrons, and other penetrating radiations.

radioscopy, *n*—the electronic production of a radiological image that follows very closely the changes with time of the object being imaged.

rare earth screens, *n*—see **intensifying screen**.

real-time radioscopy, *n*—radioscopy that is capable of following the motion of the object without limitation of time.

recording media, *n*—material capable of capturing or storing, or both, a radiological image in digital or analog form.

recording medium, *n*—a film or detector that converts radiation into a visible image.

region of interest, *n*—a defined group of pixels from which measurements or statistics, or both, can be derived.

relative digital image contrast, *n*—digital image contrast normalized to the average linear pixel value of the two regions of interest in a digital image.

representative quality indicator (RQI), *n*—an actual part or similar part of comparable geometry and attenuation characteristics to that of the test part(s), that has known or measurable features, or both, representing the facets of nonconformance for which the test part is to be examined.

resolution, *n*—a measure of the ability of a radiographic system to separate details between features in proximity.

DISCUSSION—Can be described either as a separation in space or a separation in contrast.

saturation, *n*—the state at which the pixel value no longer increases as a function of dose.

scintillators and scintillating crystals, *n*—a detector that converts ionizing radiation to light.

screen, *n*—alternative term for intensifying screen.

secondary radiation, *n*—radiation emitted by any substance as the result of irradiation by the primary source.

sensitivity, *n*—see **contrast sensitivity**, **equivalent IQI sensitivity**, **equivalent penetrometer sensitivity**, **IQI sensitivity**, **radiographic sensitivity**.

shim, *n*—a material, typically placed under the IQI which is radiologically similar to the object being imaged.

signal, *n*—the data present in a radiological measurement which is directly correlated with the degree of radiation attenuation by the object being examined.

signal-to-noise ratio (SNR), *n*—quotient of mean value of the linear pixel values and standard deviation of the mean linear pixel value (noise) in a given region of interest in a digital image.

slow scan direction (CR), *n*—the mechanical transport direction of the imaging plate in a CR scanner.

DISCUSSION—Also known as the index axis; orthogonal to the fast scan direction.

source, *n*—a machine or radioactive material that emits penetrating radiation.

source-detector distance (SDD), *n*—the distance between the X-ray focal spot or gamma source and the radiation detector.

source-film distance, *n*—the distance between the radiation-producing area of the source and the film.

source-object distance (SOD), *n*—the distance between the X-ray focal spot or gamma source and the source side of the object.

source-object distance for computed tomography (SOD_{CT}), *n*—the distance between the X-ray focal spot or gamma source and the center of rotation of the object.

spatial resolution, *n*—a measure of the ability of a radiographic system to separate geometric details between features in proximity.

SR_b image, *n*—the basic spatial resolution of the imaging system, which corresponds to the dimension of the smallest feature that can be resolved at a specified modulation and geometric magnification.

NOTE 5—Typical units of resolution measurement are micrometers.

SR_b detector, *n*—the basic spatial resolution of a detector, which corresponds to the dimension of the smallest feature that can be resolved at a specified modulation without geometric magnification.

NOTE 6—Typical units of resolution measurement are micrometers.

step wedge, *n*—a device with discrete step thickness increments used to obtain an image with discrete density step values.

step-wedge calibration film, *n*—a step-wedge comparison film the densities of which are traceable to a nationally recognized standardizing body.

step-wedge comparison film, *n*—a processed film with defined discrete optical density steps, used to characterize the optical density on a radiograph.

storage phosphor imaging plate, *n*—a flexible or rigid reusable detector that stores a radiological image as a result of exposure to penetrating radiation.

structure noise of DDAs, *n*—noise originating from differing properties of the individual detector elements (pixels) in a DDA.

structure noise of IPs, *n*—noise originating from physical variations in the sensitive layer and surface of an IP, which appears after scanning of the exposed imaging plate as overlaid fixed pattern noise in the digital image.

subject contrast, *n*—the logarithm of the ratio of the radiation intensities transmitted through selected portions of the specimen

system induced artifacts, *n*—anomalies that are created by a system during the acquisition, display processing, or storage of a digital image.

system noise, *n*—the noise present in a radiological measurement resulting from the individual elements of the radiological system.

target, *n*—that part of the anode of an X-ray emitting tube hit by the electron beam.

tenth-value-layer (TVL), *n*—the thickness of the layer of a specified substance which, when introduced into the path of a given narrow beam of radiation, reduces the intensity of this radiation by a factor of ten.

tomography, *n*—any radiologic technique that provides an image of a selected plane in an object to the relative exclusion of structures that lie outside the plane of interest (see **tomogram** and **(CT) computed tomography**).

total image unsharpness, *n*—the blurring of test object features, in a radiological image resulting from any cause(s).

translucent base media, *n*—materials with properties that allow radiological interpretation by transmitted or reflected light.

transmission densitometer, *n*—an instrument that measures the intensity of the transmitted light through a radiographic film and provides a readout of the transmitted film density.

transmitted film density, *n*—the density of radiographic film determined by measuring the transmitted light.

tube current, *n*—the flow of electrons from the filament to the anode target in an X-ray tube; usually expressed in units of milliamperes or microamperes.

vacuum cassette, *n*—a flexible light-tight container that, when operated under a vacuum, holds film and screen in intimate contact during a radiographic exposure.

voxel, *n*—the smallest addressable element in a three-dimensional digital volume.

window level, *n*—the center of the numerical range of pixel values that are assigned to the range of displayed luminance, used to adjust the displayed brightness of an image.

window width, *n*—the numerical range of pixel values that are assigned to the range of displayed luminance, used to adjust displayed contrast of an image.

Section E: Leak Testing (LT) Terms

The terms defined in Section E are the direct responsibility of Subcommittee E07.08 on Leak Testing Methods.

absolute manometer, *n*—a manometer whose calibration can be calculated from the measurable physical constants of the instrument and for which calibration is the same for all ideal gases.

absolute pressure, *n*—pressure above the absolute zero corresponding to empty space, that is, local atmospheric pressure plus gauge pressure.

absorption, *v*—in leak testing, the binding or incorporation of gas in the interior of a solid (or liquid).

accumulation test, *n*—a leak test used to detect very small leaks in which gas contained in a component being tested will, if a leak is present, collect for a specified period of time in a closed evacuated chamber into which the component has been placed. At the end of the test period, the chamber is opened to a leak detector which is sensitive to the gas.

alkali ion diode, *n*—a sensor for halogen gases. (See also **halogen leak detector (2)**.)

aperture leak, *n*—a leak of such geometric configuration that the length of the leakage path is much smaller than the shortest diameter of the path, so that the leak may be considered the equivalent of an opening in an infinitesimally thin wall.

atmosphere (standard), *n*—the pressure exerted by a mercury column 760 mm in height at 0 °C under standard acceleration of gravity; equivalent to 101 325 Pa.

atmospheric pressure, *n*—the pressure of the atmosphere at a specified place and time (see **Table 1**).

atomic mass unit (amu), *n*—the unit of measure of the mass of a particle (atom, molecule, ion, and so forth), defined as $\frac{1}{12}$ of the mass of carbon-12. The numerical value of the mass of a particle in terms of amu is identical with the older atomic weight.

TABLE 1 Composition and Partial Pressures of the Atmosphere

Constituent	Volume %	Partial Pressure, kPa
At sea level (atmospheric pressure is 101 kPa):		
Oxygen	21	(0.21 × 101 =) 21
Nitrogen	78	(0.78 × 101 =) 79
Others	1	(0.01 × 101 =) 1
		Total atmospheric pressure, 101
At 3700 m altitude (atmosphere pressure is 64 kPa):		
Oxygen	21	(0.21 × 64 =) 13
Nitrogen	78	(0.78 × 64 =) 50
Others	1	(0.01 × 64 =) 1
		Total atmospheric pressure, 64

audible leak indicator, *n*—an accessory to a leak detector which converts the output signal to an audible note whose frequency is a function of the leakage rate.

back pressure, *n*—same as **forepressure**.

back pressure test, *n*—same as **pressure-evacuation test**.

background signal, *n*—in leak testing, the steady or fluctuating output signal of the leak detector caused by the presence of residual tracer gas or other substance to which the detecting element responds.

backing pump, *n*—same as **fore pump**.

backing space, *n*—the space between a backing pump (fore pump) and the associated diffusion pump (or other type of pump requiring a fore pump). (See also **ballast**.)

backing space technique, *n*—a method of testing for leaks in which the leak detector is connected to the backing space to take advantage of the compression of gas that occurs between the vacuum system and the backing pump, due to the action of the diffusion pump (or other type of pump of high speed relative to its backing pump).

bake-out, *n*—in leak testing, the degassing of a vacuum system by heating during the pumping process.

ballast, *n*—in leak testing, a backing space large enough to maintain a low forepressure when the fore pump is temporarily stopped.

Bayard-Alpert ionization gauge, *n*—see **ionization vacuum gauge**.

bell jar, *n*—a container, open at one end (usually the bottom), which is used as a vacuum chamber or test vessel.

bell jar testing, *n*—a test used for detecting leakage from an object completely or partially filled with a tracer gas and placed in a vacuum chamber or bell jar.

bomb test, *n*—see **pressure-evacuation test**.

bubble immersion test, *n*—a form of leak test of gas-containing enclosures in which a leak is indicated by the formation of a bubble at the site of a leak.

clean-up, *n*—in leak testing, the time required for a leak testing system to reduce its signal output to 37 % of the signal indicated at the time the tracer gas ceases to enter the leak system. Also called clean-up time.

clusec, *n*—an obsolete unit of flow rate equal to 10-2 lusecs.

cold-cathode ionization gauge, *n*—see **ionization vacuum gauge**.

concentration ratio, *n*—in leak testing, the ratio of the number of atoms (molecules) of a given constituent of a (gas) mixture to the total number of atoms (molecules) in the mixture. For ideal gases, the concentration ratio has the same value as the volume fraction or the partial pressure of the constituent.

conductance, *n*—in leak testing, the ratio of the throughput (under steady state, conservative conditions) of a gas flowing through a conduit or an orifice to the difference in the partial pressures of the gas at the two ends of the conduit or on the two sides of the orifice, expressed in volume units per unit time, such as cubic metres per second.

cracking, *v*—in leak testing, same as **dissociation**.

differential leak detector, *n*—a leak detector employing two similar gauge tubes in a bridge circuit with a trap which is selective for the tracer gas between the system and one of the tubes.

differential Pirani gauge, *n*—a leak detecting device employing two similar Pirani tubes as arms of a Wheatstone bridge.

diffusion, *n*—in leak testing, the flow of the gas through a substance in which the gas actually migrates through the crystal lattice of the substance rather than through a geometrical leak (molecular diameters versus hole dimension).

discharge pressure, *n*—in leak testing, same as **forepressure**.

discharge tube leak indicator, *n*—a glass tube attached to a system being leak tested, with the glass tube having electrodes attached to a source of high-frequency high voltage, such as a Tesla coil or induction coil, so that changes in the color of the electrical discharge can be observed when a suitable tracer gas (methane, carbon dioxide, alcohol) flows through the leak.

dissociation, *n*—in leak testing, the breakdown of a substance into two or more constituents.

DISCUSSION—Dissociation is sometimes referred to as cracking.

drift, *n*—in leak testing, the relatively slow change in the background output level of the leak detector due to the electronics rather than a change in the level of the tracer gas.

dynamic leak test, *n*—a form of leak test in which some of the tracer gas entering through a leak is continually removed for sensing purposes.

dynamic leakage measurement, *n*—leakage determined by measuring the tracer gas equilibrium partial pressure while the system is actively being pumped.

dynamic sensitivity of leak detector, *n*—the minimum leak rate that the detector is capable of detecting while the enclosure under test is actively being evacuated continuously under specified conditions.

equivalent nitrogen pressure, *n*—the calculated pressure that a gauge or another device would indicate if the gas in the device were replaced by nitrogen at the same molecular density.

exhaust pressure, *n*—in leak testing, same as **forepressure**.

exhaust tubulation, *n*—same as **pump-out tubulation**.

flooded system, *n*—a system which, while being tested, becomes so filled with tracer gas as to make impracticable further leak testing.

flow, *n*—same as **flow rate**.

flow rate, *n*—in leak testing, (1) the rate at which gas passes a given cross section of a system, determined by the product of the volume passing per unit time and its (partial) pressure at the cross section; (2) a product of the (partial) pressure difference of a gas at the ends of a conduit or across the face of an orifice, and the conductance of the gas for the conduit or orifice. Expressed in pressure-volume per unit time, such as pascal cubic metres per second.

fore-line, *n*—in leak testing, the line between a fore pump and the pump it backs.

fore-line valve, *n*—in leak testing, a vacuum valve placed in the fore-line to permit isolation of the diffusion pump from its backing pump.

forepressure, *n*—in leak testing, the total pressure on the outlet side of a pump measured near the outlet port. Sometimes called the back pressure, backing pressure, outlet pressure, exhaust pressure, or discharge pressure. In discussing the action of a vapor jet, the term forepressure may be used to designate the total pressure of the gas against which the jet impinges.

fore pump, *n*—in leak testing, the pump that produces the necessary fore vacuum for a pump which is incapable of discharging gases at atmospheric pressure. Sometimes called the backing pump.

gauge pressure, *n*—difference between the absolute pressure and atmospheric pressure.

gas, *n*—the state of matter in which the molecules are practically unrestricted by intermolecular forces so that the molecules are free to occupy all space within an enclosure. In vacuum technology, the word gas has been loosely applied to the uncondensed gas and vapor within a vacuum system.

halogen, *n*—any element of the family of the elements fluorine, chlorine, bromine, and iodine. Compounds do not fall under the strict definition of halogen. However, for the purpose of this standard, this word provides a convenient descriptive term for halogen-containing compounds. Of significance in halogen leak detection are those which have enough vapor pressure to be useful as tracer gases.

halogen leak detector, *n*—a leak detector that responds to halogen tracer gases. Also called halogen-sensitive leak detector or halide leak detector. (1) The copper-flame detector or halide torch consists of a bunsen burner with flame impinging on a copper plate or screen, and a hose with sampling probe to carry tracer gas to the air intake of the burner. (2) The alkali-ion diode halogen detector depends on the variation of positive ion emission from a heated platinum anode when halogen molecules enter the sensing element.

helium bombing, *n*—a pressure-evacuation test in which helium is used as the test gas.

helium drift, *v*—(1) *in leak testing with a probe*, the drift from a leak or permeable gasket located at some distance from the end of the probe but which is detected by the probe and can mislead the operator into suspecting the area near the probe; (2) a gradual wandering of the output meter needle of the leak detector due to slowly changing helium concentrations (either due to a leak or outgassing) in the detector tube. Expressed in scale divisions per unit time.

helium leak detector, *n*—a leak detector using helium as the tracer gas.

hermetically tight seal, *n*—a seal which does not exhibit leakage when dynamically tested with commercially built leak detectors that are sensitive to a gas on the pressure side opposite to the side on which the leak detector is located, or which does not exhibit leakage with any form of liquid test.

high vacuum, *n*—see **Table 2**.

holding pump, *n*—a fore pump used to hold a vapor pump at operating conditions while a roughing pump reduces the system pressure to a point at which the valve between the vapor pump and the system can be opened without stopping the flow of vapor from the nozzles.

hood test, *n*—an overall test in which an object under vacuum test is enclosed by a hood which is filled with tracer gas so as to subject all parts of the test object to examination at one time. A form of dynamic leak test in which the entire enclosure or a large portion of its external surface is exposed to the tracer gas while the interior is connected to a leak detector with the objective of determining the existence of leakage.

hot-cathode ionization gauge, *n*—see **ionization vacuum gauge**.

hot-filament ionization gauge, *n*—see **ionization vacuum gauge**.

hydraulic pressure test, *n*—same as **hydrostatic test**.

hydrostatic test, *n*—*in leak testing*, a pressure test in which the component being tested is filled completely with water or another liquid. Pressure, if required, is then applied to the liquid for the required time and the outside of the component is examined visually for leaks.

ideal gas, *n*—a gas that obeys Boyle's law and has zero heat of free expansion (or also obeys Charles' law). Also known as a perfect gas.

in-leakage rate, *n*—the combined leakage rate from all existing leaks in a specified evacuated vessel in pressure volume units per unit of time.

TABLE 2 Degrees of Vacuum

Degrees of Vacuum	Approximate Pressure Range
Low	100 kPa to 3 kPa
Medium	3 kPa to 0.1 Pa
High	0.1 Pa to 0.1 mPa
Very high	0.1 mPa to 0.1 μ Pa
Ultra high	0.1 μ Pa and less

inlet, *n*—the opening, flange, connection, or coupling on a leak detector or leak testing system through which the tracer gas may enter due to a leak in an object under test.

inlet flange, *n*—see **inlet**.

inlet port, *n*—see **inlet**.

inside-out testing, *n*—see **bell jar testing**.

ion pump, *n*—an electrical device for pumping gas comprising a means for ionizing the gas and a system of electrodes at suitable potentials, and in some cases also a magnetic field, which causes the ions formed to move towards a surface on which they are absorbed or buried.

ion source, *n*—*in leak testing*, that part of a leak detector tube in which tracer gas is ionized preliminary to being detected.

ionization potential, *n*—the minimum energy, expressed in (electron) volts, required to remove an electron from an atom or molecule to form a positive ion.

ionization vacuum gauge, *n*—a vacuum gauge comprising a means of ionizing the gas molecules, electrodes to facilitate the collection of the positive ions formed, and means of indicating the magnitude of the collected ion current. Various types of ionization gauges are distinguished in accordance with the method of producing the ionization. The common types are as follows:

(a) **hot-cathode ionization gauge, *n***—the ions are produced by collisions with electrons emitted from a hot filament (or cathode) and accelerated by an electric field. Also called hot-filament ionization gauge, or simply ion gauge. The Bayard-Alpert ionization gauge employs a tube with an electrode structure designed to minimize X-ray-induced electron emission from the ion collector.

(b) **cold-cathode ionization gauge, *n***—the ions are produced by a cold-cathode discharge, usually in the presence of a magnetic field which lengthens the path of the electrons between cathode and anode. The discharge tube is a transparent tube in which the color and form of a cold-cathode discharge (without the presence of a magnetic field) gives an indication of the pressure and the nature of the gas. The Phillips ionization gauge is a cold-cathode ionization gauge in which a magnetic field is directly parallel to the axis of an annular electrode (normally the anode) located between two plate electrodes perpendicular to the axis. Various modifications of the Penning gauge are named after the inventors, and certain types are referred to as magnetron vacuum gauges.

(c) **radioactive ionization gauge, *n***—the ions are produced by radiations (usually alpha particles) emitted from a radioactive source.

isolation test, *n*—*in leak testing*, a method of determining whether a leak is present in a system, or of obtaining an estimate of its magnitude, by observing the rate of rise of pressure in the evacuated system when the system is isolated from the pump. (See also **rate of rise**.)

Krypton 85, *n*—a tracer gas used to test for leakage when the radioisotope leak test method is used.

leak, *n*—a hole, or void in the wall of an enclosure, capable of passing liquid or gas from one side of the wall to the other under action of pressure or concentration differential existing across the wall, independent of the quantity of fluid flowing.

leak artifact, *n*—a device used to introduce gas into a system at a controlled rate, usually 10^{-7} mol/s or less.

leak detector, *n*—a device for detecting, locating, or measuring, or combinations thereof, leakage.

leak testing, *n*—comprises procedures for detecting or locating or measuring leakage, or combinations thereof.

leakage rate, *n*—the flow rate of a liquid or gas through a leak at a given temperature as a result of a specified pressure difference across the leak. Standard conditions for gases are 25 °C and 100 kPa. Leakage rates are expressed in various units such as pascal cubic metres per second or pascal litres per second (see **Table 3**).

low vacuum, *n*—see **Table 2**.

lusec, *n*—a unit of flow rate equal to 0.133 mPa·m³/s.

masking, *v*—in *leak testing*, the covering of a section of a test object so as to prevent tracer gas from entering leaks that may exist in the covered section.

mass number, *n*—the whole number nearest to the atomic mass expressed in either atomic mass units or as (chemical) atomic weight.

mass spectrometer (M.S.), *n*—an instrument that is capable of separating ionized molecules of different mass to charge ratio and measuring the respective ion currents. The mass spectrometer may be used as a vacuum gauge that relates an output which is proportioned to the partial pressure of a specified gas, as a leak detector sensitive to a particular tracer gas, or as an analytical instrument to determine the percentage composition of a gas mixture. Various types are distinguished by the method of separating the ions. The principal types are as follows:

TABLE 3 Conversion Factors for Leak Testing

To Convert from	To	Multiply Column 1 by
<i>Leakage Rate:</i>		
atm·cm ³ /s	Pa·m ³ /s	1.10×10^{-1}
micron-litres/s	Pa·m ³ /s	1.33×10^{-4}
micron-ft ³ /h	Pa·m ³ /s	1.05×10^{-4}
pascal-litres/s	Pa·m ³ /s	1.00×10^{-3}
STD·cm ³ /s	Pa·m ³ /s	1.01×10^{-1}
torr-litres/s	Pa·m ³ /s	1.33×10^{-1}
<i>Pressure:</i>		
atmosphere (std)	Pa	1.01×10^5
bar	Pa	1.00×10^5
micrometre of Hg	Pa	1.33×10^{-1}
micron	Pa	1.33×10^{-1}
millimetre of Hg	Pa	1.33×10^2
pounds-force/in. ²	Pa	6.89×10^3
torr	Pa	1.33×10^2
<i>Viscosity:</i>		
centipoise	Pa·s	1.00×10^{-3}
poise	Pa·s	1.00×10^{-1}
<i>Volume:</i>		
cm ³	m ³	1.00×10^{-4}
ft ³	m ³	2.83×10^{-2}
litre	m ³	1.00×10^{-3}

(a) *Dempster (M.S.)*, *n*—the ions are first accelerated by an electric field through a slit, and are then deflected by a magnetic field through 180° so as to pass through a second slit.

(b) *Bainbridge-Jordan (M.S.)*, *n*—the ions are separated by means of a radial electrostatic field and a magnetic field deflecting the ions through 60° so arranged that the dispersion of ions in the electric field is exactly compensated by the dispersion in the magnetic field for a given velocity difference.

(c) *Bleakney (M.S.)*, *n*—the ions are separated by crossed electric and magnetic fields. Also called cross fields (M.S.).

(d) *Nier (M.S.)*, *n*—a modification of the Dempster (M.S.) in which the magnetic field deflects the ions.

(e) *Time of Flight (M.S.)*, *n*—the gas is ionized by a pulse-modulated electron beam and each group of ions is accelerated toward the ion collector. Ions of different mass to charge ratios traverse their paths in different times.

(f) *Radio-Frequency (M.S.)*, *n*—the ions are accelerated into a radio-frequency analyzer in which ions of a selected mass to charge are accelerated through openings in a series of spaced plates alternately attached across a radio-frequency oscillator. The ions emerge into an electrostatic field which permits only the ions accelerated in the analyzer to reach the collector.

(g) *Omegatron (M.S.)*, *n*—the ions are accelerated by the cyclotron principle.

mass spectrometer leak detector, *n*—a mass spectrometer adjusted to respond only to the tracer gas.

mass spectrum, *n*—a record, graph, table, and so forth, that shows the relative number of ions of various mass that are produced when a given substance is processed in a mass spectrometer.

mean free path, *n*—the average distance that a molecule travels between successive collisions with other molecules.

medium vacuum, *n*—see **Table 2**.

micrometre, *n*—a unit of length equal to one millionth of a metre.

micron, *n*—a term for micrometre.

micron of mercury, *n*—a unit of pressure equal to that exerted by a column of mercury standing one micrometre high.

millimetre of mercury, *n*—a unit of pressure corresponding to a column of mercury exactly 1 mm high under standard acceleration of gravity. Sometimes called torr.

minimum detectable leakage rate, *n*—the magnitude of the smallest leakage rate that can be unambiguously detected by a given leak detector in the presence of conditions existing at time of test.

molecular flow, *n*—the flow of gas through a passage under conditions such that the mean-free path is greater than the largest dimension of a transverse section of the passage.

molecular leak, *n*—a leak of such geometric configuration that gas flow through it obeys the laws of molecular flow (Knudsen's law). The flow is proportional to the difference

of the end pressures and inversely proportional to the square root of the molecular weight of the gas.

newton (N), *n*—the SI unit of force ($\text{kg}\cdot\text{m/s}^2$).

noncondensable gas, *n*—a gas whose temperature is above its critical temperature, so that it cannot be liquefied by increase of pressure alone.

occlusion, *n*—the trapping of undissolved gas in a solid during solidification.

outgassing, *n*—the evolution of gas from a material in a vacuum.

outlet pressure, *n*—see **forepressure**.

palladium barrier leak detector, *n*—a leak detector using hydrogen as the tracer gas and using the principle of hydrogen diffusing through a hot palladium barrier into an evacuated vacuum gauge.

partial pressure, *n*—the pressure caused by a gas, either by itself, or in the presence of other gases. When a second gas is not present, the partial pressure is the same as the total pressure.

pascal (Pa), *n*—one pascal is approximately equal to 1×10^{-5} atm or, more precisely, $1 \text{ Pa} = 0.98692 \times 10^{-5} \text{ atm}$.

pascal cubic metres per second ($\text{Pa}\cdot\text{m}^3/\text{s}$), *n*—the preferred unit of gas flow in the SI system. One $\text{Pa}\cdot\text{m}^3/\text{s}$ is approximately equal to 10 atm cm^3/s or, more precisely, $1 \text{ Pa}\cdot\text{m}^3/\text{s} = 9.8692 \text{ atm}\cdot\text{cm}^3/\text{s}$.

Penning gauge, *n*—see **ionization vacuum gauge**.

perfect gas, *n*—see **ideal gas**.

permeability coefficient, *n*—the steady-state rate of flow of gas through unit area and thickness of a solid barrier per unit pressure differential at a given temperature.

Phillips ionization gauge, *n*—see **ionization vacuum gauge**.

Pirani gauge, *n*—see **thermal conductivity vacuum gauge**.

Poiseuille flow, *n*—the particular case of laminar viscous flow through a long pipe of circular cross section.

pressure difference, *n*—in leak testing, the difference between the pressure on the inlet side of the leak and the pressure on the exit side of the leak.

pressure dye test, *n*—(1) a form of leak test in which the item or items to be tested are filled with a liquid dye or fluorescent oil which is then pressurized for the purpose of driving the liquid through possible leakage paths with the presence of the leaks being visible when viewed from the exterior; (2) a form of leak test in which the item or items to be tested are immersed in a liquid dye or fluorescent oil which is then pressurized for the purpose of driving liquid into possible leakage paths with their presence being visible when the excess liquid has been removed from the exterior.

pressure-evacuation test, *n*—a leak test in which one or more devices are placed under gas pressure for a period of time, the objective being to accumulate enough gas in those devices that may leak to permit an indication on a leak

detector sensitive to the gas when the devices are placed in an evacuated system joined to the leak detector.

pressure probe, *n*—see **probe**.

pressure testing, *n*—a method of leak testing in which the component being tested is filled completely with a gas or liquid which is then pressurized. The outside of the component is examined for the detection of any leaks.

probe, *n*—*in leak testing*, a tube having an opening at one end, used for directing or collecting a stream of tracer gas.

probe gas, *n*—*in leak testing*, a tracer gas which issues from an orifice so as to impinge on a restricted test area.

probe test, *n*—a leak test in which the tracer gas is applied by means of a probe so that the area covered by the tracer gas is localized. This enables the individual leaks to be located.

proportioning probe, *n*—*in leak testing*, a probe that can vary sample to pure air ratios between 100 % sample and 100 % pure air without substantially changing the total flow from the probe.

pump-down time, *n*—time of evacuation.

pump-out tubulation, *n*—a tube extending from an evacuated device through which gas is pumped and which is usually permanently sealed off after the device has been evacuated. Sometimes called exhaust tubulation.

radioisotope leak test system, *n*—a leak test system which uses a radioactive tracer gas and a detector for measuring the emission from the tracer.

rate of rise, *n*—*in leak testing*, the time rate of pressure increase at a given time in a vacuum system which is suddenly isolated from the pump by a valve. The volume and temperature of the system are held constant during the rate of rise measurement. (See **isolation test**.)

resistance (to flow), *n*—the reciprocal of conductance.

response factor, *n*—*in leak testing*, the response of the halogen leak detector $0.3 \text{ MPa}\cdot\text{m}^3/\text{s}$ of refrigerant-12 (dichlorodifluoromethane, CCl_2F_2) or less, divided by the response to the same quantity of another halogen test gas. Thus, the actual leak rate of a detected leak will be the indication of the detector multiplied by the response factor. The response of mixture of a tracer and nonhalogen gases will be the response factor of the tracer divided by the fraction of tracer gas in the test gas.

response time, *n*—the time required for a leak detector or leak testing system to yield a signal output equal to 63 % of the maximum signal attained when tracer gas is applied continuously to the system under test. Also called response.

roughing, *v*—*in leak testing*, the initial evacuation of a vacuum system.

roughing line, *n*—*in leak testing*, a line running from a mechanical pump to a vacuum chamber through which preliminary pumping is conducted in the rough vacuum range.

roughing pump, *n*—*in leak testing*, a vacuum pump used for the initial evacuation of a vacuum system.

sampling probe, *n*—*in leak testing*, a device used to collect tracer gas from an area of the test object and feed it to the leak detector at the reduced pressure required. Also called a sniffing probe.

scattering, *v*—*in leak testing*, dispersion or diffusion in various directions due to intermolecular or ionic collisions as applied to the effect of the residual gas in a mass spectrometer tube or an ion beam traversing the tube.

search-gas, *n*—same as **tracer gas**.

sensitivity, *n*—*in the case of a leak detector*, the response of the detector to tracer gas leakage (that is, scale divisions per unit of leakage rate).

sensitivity of leak test, *n*—the smallest leakage rate that an instrument, method, or system is capable of detecting under specified conditions. (See **minimum detectable leakage rate**.)

sniffing probe, *n*—same as **sampling probe**.

sorption, *v*—the taking up of gas by absorption, adsorption, chemisorption, or any combination of these processes.

spark coil leak detector, *n*—a high-frequency discharge coil of the Tesla type which indicates pin holes in glass vacuum systems by a spark jumping between the core of the coil and the pin hole.

spectrometer tube, *n*—the sensing element of a mass spectrometer leak detector.

spray probe, *n*—*in leak testing*, a device for directing a small jet of tracer gas on an object under vacuum testing.

squealer, *n*—same as audible leak indicator.

standard leak, *n*—a device that permits a tracer gas to be introduced into a leak detector or leak testing system at a known rate to facilitate calibration of the leak detector.

standard leakage rate, *n*—the rate of flow of atmospheric air under conditions in which: inlet pressure is $0.1 \text{ MPa} \pm 5\%$; outlet pressure is less than 1 kPa ; temperature is $25 \pm 5^\circ\text{C}$; and dew point is less than -25°C .

thermal conductivity vacuum gauge, *n*—a vacuum gauge containing two surfaces at different temperatures between which heat can be transported by the gas molecules so that changes in the temperature (or in the heating power required to maintain constant temperature) of one of the surfaces can be correlated with the gas pressure. Various types of thermal conductivity gauges are distinguished in accordance with the method of indicating the temperature change. The common types are listed below:

(1) **Pirani Gauge**, *n*—an increase of pressure from the zero point causes a decrease in the temperature of a heated filament of material having a large temperature coefficient of resistance thus unbalancing a Wheatstone bridge circuit (or the circuit is adjusted to maintain the filament temperature constant).

(2) **Thermocouple Gauge**, *n*—the decrease in temperature of a heated filament as the pressure rises is indicated by decreased emf in a thermocouple circuit having the junction in thermal contact with the center of the heated filament.

(3) **Thermistor Gauge**, *n*—a form of Pirani gauge employing a thermistor as the heated element.

(4) **Bimetallic Strip Gauge**, *n*—deflection of a bimetallic strip with changing temperature indicates the changes in pressure.

thermocouple gauge, *n*—see **thermal conductivity vacuum gauge**.

throttling, *v*—*in leak testing*, reducing the net pumping speed of a pumping system by partially closing a valve or installing a section of pipeline with low conductance.

throughput, *n*—same as **flow rate** (1).

tight, *n*—*in leak testing*, free from leaks in accordance with a given specification.

torr, *n*—a unit of pressure equal to $1/760$ of an atmosphere.

tracer gas, *n*—a gas which, passing through a leak, can then be detected by a specific leak detector and thus disclose the presence of a leak. Also called search gas.

tracer probe leak location—same as **probe test**.

transition flow, *n*—*in leak testing*, the flow of gases under conditions intermediate between laminar viscous flow and molecular flow.

ultra-high vacuum, *n*—see **Table 2**.

ultrasonic leak detector, *n*—an instrument that detects ultrasonic energy produced by molecular turbulence that occurs in the transition from laminar to turbulent flow of a gas through an orifice and that converts this energy to a usable signal.

vacuum, *n*—*in vacuum technology* a given space filled with gas at pressures below atmospheric pressure (see **Table 2**).

vacuum testing, *n*—(1) a method of testing for leaks in which the object under test is evacuated and the tracer gas applied to the outside surface of the object; (2) a leak-testing procedure in which the enclosure under examination is evacuated, the tracer gas applied to the outside surface of the enclosure, and the gas detected after entering the enclosure.

vapor pressure, *n*—the pressure exerted by the vapor of a solid or liquid when in equilibrium with the solid or liquid.

very high vacuum, *n*—see **Table 2**.

virtual leak, *n*—(1) the semblance of a leak in a vacuum system caused by slow release of trapped gas.

(2) during a rate-of-rise test, the semblance of a leak in a vacuum system caused by slow release of sorbed or occluded gas or gases on or in the surfaces and pores of all materials in a system which has been exposed to atmospheric pressure prior to evacuation.

viscous flow, *n*—the flow of gas through a duct under conditions such that the mean free path is very small in comparison with the smallest dimension of a transverse section of the duct. This flow may be either laminar or turbulent.

viscous leak, *n*—a leak of such geometric configuration that gas flow through it is viscous in nature; that is, the flow obeys Poiseuille's Law. The flow rate is proportional to the difference of the squares of the end pressures, and inversely proportional to the gaseous viscosity.

Section F: Liquid Penetrant Testing (PT) Terms

The terms defined in Section F are the direct responsibility of Subcommittee E07.03 on Liquid Penetrant and Magnetic Particle Methods.

angstrom unit (Å), *n*,—a unit of length which may be used to express the wavelength of electromagnetic radiation, that is, light. One angstrom unit is equal to 0.1 nanometres. (1 nm = 10^{-9} m.)

background, *n*—the surface of the test part against which the indication is viewed. It may be the natural surface of the test part or the developer coating on the surface.

black light, *n*—see **UV-A**.

black light filter, *n*—see **UV-A pass filter**.

bleedout, *v*—the action of an entrapped liquid penetrant in surfacing from discontinuities to form indications.

blotting, *v*—the action of the developer in soaking up the penetrant from the discontinuity to accelerate bleedout.

carrier, *n*—a liquid, either aqueous or nonaqueous, in which liquid penetrant testing materials are dissolved or suspended.

class, *n*—the descriptive term for categorizing solvent removers with similar characteristics.

clean, *n*—free of contaminants.

contaminant, *n*—any foreign substance present on the test surface or in the inspection materials which will adversely affect the performance of liquid penetrant materials.

contrast, *n*—the difference in visibility (brightness or coloration) between an indication and the background.

detergent remover, *n*—a penetrant remover that is a solution of a detergent in water.

developer, *n*—a material that is applied to the test surface to accelerate bleedout and to enhance the contrast of indications.

developer, aqueous, *n*—a suspension of developer particles in water.

developer, dry powder, *n*—a fine free-flowing powder used as supplied.

developer, liquid film, *n*—a suspension of developer particles in a vehicle which leaves a resin/polymer film on the test surface after drying.

developer, non-aqueous, *n*—developer particles suspended in a nonaqueous vehicle prior to application.

developer, soluble, *n*—a developer completely soluble in its carrier, not a suspension of powder in a liquid, which dries to an absorptive coating.

developing time, *n*—the elapsed time between the application of the developer and the examination of the part. When no developer is to be applied, the developing time is considered the elapsed time since the component is dry after the penetrant removal process.

dragout, *n*—the carryout or loss of penetrant materials as a result of their adherence to the test pieces.

drain time, *n*—that portion of the dwell time during which the excess penetrant or emulsifier drains from the part.

drying oven, *n*—an oven used for increasing the evaporation rate of rinse water or an aqueous developer vehicle from test parts.

drying time, *n*—the time required for a cleaned, rinsed or wet developed part to dry.

dwell time, *n*—the total time that the penetrant or emulsifier is in contact with the test surface, including the time required for application and the drain time.

electrostatic spraying, *n*—a technique for attaining a uniform coating in which the material sprayed is given an electrical charge.

eluant, *n*—a liquid used to extract one material from another, as in chromatography.

emulsification time, *n*—the time that an emulsifier is permitted to remain on the part to combine with the surface penetrant prior to removal. Also called emulsification dwell time.

emulsifier, *n*—a liquid that interacts with an oily substance to make it water-washable.

emulsifier, hydrophilic, *n*—a water-based liquid used in penetrant testing, which interacts with the penetrant oil rendering it water-washable.

emulsifier, lipophilic, *n*—an oil based liquid used in penetrant testing, which interacts with the penetrant oil rendering it water-washable.

etching, *v*—the removal of surface material by chemical or electrochemical methods.

family, *n*—a complete series of penetrant materials required for the performance of a liquid penetrant testing.

flash point, *n*—the temperature at which a vapor will ignite in the presence of an ignition source.

fluorescence, *n*—the emission of visible light by a substance as a result of, and only during, the absorption of UV-A or other excitation source.

footcandle (fc), *n*—the illumination on a surface, 1 ft² in area, on which is uniformly distributed a flux of 1 lm (lumen). It equals 10.8 lm/m².

form, *n*—the descriptive term for categorizing developers with similar characteristics.

hold out sample, *n*—a sample of unused penetrant, emulsifier, or developer, or a combination of the three, set aside for future use in comparison testing.

hydrophilic emulsifier, n—see **emulsifier**.

immersion rinse, *n*—a means of removing excess surface penetrant in which the test part, test piece, or both, is immersed in an agitated tank of water.

inspection, *n*—visual examination of the test part after completion of the liquid penetrant processing steps.

known defect standard, *n*—a test piece with one or more defects used to verify the condition of the penetrant process.

DISCUSSION—This test piece is used daily to verify the penetrant application, the removal of excess surface penetrant, the application of developer, the number and color of the indications that are produced.

lipophilic emulsifier, n—see **emulsifier lipophilic**.

liquid penetrant examination, *n*—see **liquid penetrant testing**.

liquid penetrant testing, *n*—a nondestructive test that uses liquid penetrant materials to penetrate and detect various types of discontinuities open to the surface.

overemulsification, *n*—excessive emulsifier dwell time which results in the removal of penetrants from some discontinuities.

overwashing, *n*—too long or too vigorous washing, or both, which results in removal of penetrants from some discontinuities.

penetrant, *n*—a solution or suspension of dye.

penetrant comparator, *n*—an intentionally flawed specimen having separate but adjacent areas for the application of different liquid penetrant materials so that a direct comparison of their relative effectiveness can be obtained.

DISCUSSION—It can also be used to evaluate liquid penetrant techniques, liquid penetrant systems, or test conditions.

penetrant, fluorescent, *n*—a penetrant that fluoresces when excited by UV-A.

penetrant, post emulsifiable, *n*—a liquid penetrant that requires the application of a separate emulsifier to render the excess surface penetrant water-washable.

penetrant, solvent-removable, *n*—a liquid penetrant so formulated that most of the excess surface penetrant can be removed by wiping with a lint-free material, with the remaining surface penetrant traces removable by further wiping with a lint-free material lightly moistened with solvent remover.

penetrant, visible, *n*—a liquid penetrant that is characterized by an intense color, usually red.

penetrant, water-washable, *n*—a liquid penetrant with a built-in emulsifier.

penetration time, n—same as **dwell time**.

pooling, *n*—the existence of excessive amounts of penetrant, emulsifier or developer in an incompletely drained area.

post-cleaning, *v*—the removal of residual liquid penetrant testing materials from the test part after the penetrant examination has been completed.

post emulsification, *v*—a penetrant removal technique employing a separate emulsifier.

precleaning, *v*—the removal of surface contaminants from the test part so that they will not interfere with the examination process.

reference materials, *n*—the standard penetrant materials against which candidate materials for qualification are compared.

rinse, *v*—the process of removing liquid penetrant testing materials from the surface of a test part by means of washing or flooding with another liquid, usually water. The process is also termed **wash**.

sensitivity level, *n*—the descriptive term for identifying the capability of a penetrant system to indicate the presence of a surface-connected discontinuity. Ranging from ½ (ultra low) to 4 (ultra high).

solvent remover, *n*—a volatile liquid used to remove excess penetrant from the surface being examined.

temperature envelope, *n*—the temperature range over which a particular penetrant inspection test will operate.

type, *n*—the descriptive term for designating a penetrant as either fluorescent (type 1) or visible (type 2).

UV-A, *n*—electromagnetic radiation in the near-ultraviolet wavelength range, 320 to 400 nm (3200 to 4000 Å).

DISCUSSION—UV-A may also be referred to as “UV-A light” or “UV-A radiation.” Sources producing UV-A typically have a peak emission (radiation) intensity at 365 nm (3650 Å).

UV-A pass filter, *n*—a filter that transmits UV-A while absorbing other wavelengths.

UV fading, *n*—the reduction of brightness of a fluorescent penetrant indication caused by excessive exposure to ultraviolet radiation.

viscosity, *n*—the property of a fluid that presents a resistance to shearing flow.

visible light, *n*—electromagnetic radiation in the 400 to 760 nm (4000 to 7600 Å) wavelength range.

visual adaptation, *n*—the adjustment of the eyes when one passes from a bright to a darkened place.

wash, n—same as **rinse**.

water tolerance, *n*—the amount of water that a penetrant or emulsifier can absorb before its effectiveness is impaired.

wetting action, *n*—the ability of a liquid to spread over and adhere to solid surfaces.

*white light, *n**—see **visible light**.

Section G: Magnetic Particle Testing (MT) Terms

The terms defined in Section G are the direct responsibility of Subcommittee E07.03 on Liquid Penetrant and Magnetic Particle Methods.

ammeter shunt, *n*—a low-resistance precision resistor with high current carrying capacity connected in parallel with an ammeter.

ampere turns, *n*—the product of the number of turns of a coil and the current in amperes flowing through the coil.

arc strikes, *n*—localized burn damage to a part from an arc caused by making or breaking an energized electrical circuit.

background, *n*—the appearance of the surface of the test part against which indications are viewed.

bath, *n*—see **suspension**.

bipolar field, *n*—see **field, bipolar**.

black light, *n*—see **UV-A**

black light filter, *n*—see **UV-A pass filter**.

carrier fluid, *n*—the fluid in which fluorescent and nonfluorescent magnetic particles are suspended to facilitate their application.

central conductor, *n*—a conductor passed through a hollow part and used to produce circular magnetization within the part.

circular field, *n*—see **field, circular**.

circular magnetization, *n*—the magnetization in a part resulting from current passed directly through the part or through a central conductor.

coercive force, *n*—the magnetizing force at which the magnetic flux density is equal to zero. The corresponding field intensity value is indicative of the ease of difficulty or demagnetization.

coil method, *n*—a method of magnetization in which part, or whole, of the component is encircled by a current-carrying coil.

coil technique, *n*—a technique of magnetization in which all, or a portion, of the part is encircled by a current-carrying coil.

conditioning agent, *n*—an additive to water suspensions that imparts specific properties such as: proper wetting, particle dispersion, corrosion resistance, biological resistance, or foam inhibition.

contact head, *n*—electrode assembly used to clamp and support a part to facilitate passage of electrical current through the part for circular magnetization.

contact pad, *n*—replaceable metal pad, usually of copper braid, placed on electrodes to give good electrical contact, thereby preventing damage, such as arc strikes, to the part under test.

continuous method, *n*—a method wherein the indicating medium is applied while the magnetizing force is present.

core (of an electromagnetic inspection circuit), *n*—that part of the magnetic circuit which is within the electrical winding.

Curie point, *n*—the temperature at which ferromagnetic materials can no longer be magnetized by outside forces, and at which they lose their residual magnetism (approximately 1200 to 1600 °F (649 to 871 °C) for many metals).

current flow method, *n*—a method of magnetizing by passing a current through a component via prods or contact heads. The current may be alternating, rectified alternating, or direct.

current induction method, *n*—a method of magnetizing in which a circulating current is induced in a ring component by the influence of a fluctuation magnetic field that links the component.

dark adaptation, *n*—the adjustment of the eyes when one passes from a bright to a darkened place.

demagnetization, *n*—the reduction of residual magnetism to an acceptable level.

diffuse indications, *n*—indications that are not clearly defined as, for example, indications of subsurface defects.

direct contact magnetization, *n*—a technique of magnetizing in which the current is passed through a part via prods or contact heads.

dry method, *n*—magnetic particle inspection in which the ferromagnetic particles employed are in the dry powder form.

dry powder, *n*—finely divided ferromagnetic particles suitably selected and prepared for magnetic particle inspection.

dry technique, *n*—the examination technique in which the ferromagnetic particles are applied in the dry powder form.

electromagnet, *n*—a soft iron core surrounded by a coil of wire that temporarily becomes a magnet when an electric current flows through the wire.

energizing cycle, *n*—the application of a magnetizing force to a conductor.

examination medium, *n*—a powder or suspension of magnetic particles that is applied to a magnetized test surface to

determine the presence or absence of surface or slightly subsurface discontinuities.

ferromagnetic, *n*—a term applied to materials that can be magnetized or strongly attracted by a magnetic field.

field, bipolar, *n*—longitudinal magnetic field within a part that has two poles.

field, circular magnetic, *n*—generally, the magnetic field surrounding any electrical conductor or part resulting from a current being passed through the part or conductor from one end to another.

field, longitudinal magnetic, *n*—magnetic field wherein the flux lines traverse the component in a direction essentially parallel with its longitudinal axis.

field, magnetic, *n*—the space, within and surrounding a magnetized part or a conductor carrying current, in which the magnetic force is exerted.

field, magnetic leakage, *n*—the magnetic field that leaves or enters the surface of a part at a discontinuity or change in section configuration of a magnetic circuit.

field, residual magnetic, *n*—the field that remains in a piece of magnetizable material after the magnetizing force has been removed.

field, resultant magnetic, *n*—(sometimes called vector): a magnetic field that is the result of two magnetizing forces impressed upon the same area of a magnetizable object.

field strength, *n*—see **magnetic field strength**.

fill factor, *n*—the ratio of the cross sectional area of the part being tested to the cross sectional area of the encircling coil.

flash magnetization, *n*—magnetization by a current flow of very brief duration.

flash point, *n*—the lowest temperature at which vapors above a volatile combustible substance ignite in air when exposed to a flame.

fluorescence, *n*—the emission of visible light by a substance as a result of, and only during, the absorption of UV-A or other excitation source.

fluorescent examination method, *n*—the magnetic particle examination method employing a finely divided fluorescent ferromagnetic inspection medium.

fluorescent magnetic particle inspection, *n*—the magnetic particle inspection process employing a finely divided fluorescent ferromagnetic inspection medium that fluoresces when activated by UV-A or other excitation source.

flux density, magnetic, *n*—the strength of a magnetic field, expressed in flux lines per unit area.

flux leakage field, *n*—the magnetic field that leaves or enters the surface of a part as the result of a discontinuity or a change in section.

flux lines, *n*—see **lines of force**.

flux penetration, *n*—the depth to which a magnetic flux exists in a part.

footcandle (fc), *n*—the illumination on a surface with an area of 1 ft², on which a flux of 1 lm (lumen) is uniformly distributed. 1 fc is equal to 10.76 lux (lm/m²).

full-wave direct current (FWDC), *n*—a rectified three-phase alternating current.

full-wave rectified current (FW), *n*—this waveform is the result of rectifying a sinusoidal input by inverting the negative half-cycle of the sine wave so that the output contains two half-sine pulses for each input. This process may be applied to either single-phase or three-phase alternating current. Each can also be stated as full wave rectified alternating current.

furring, *n*—buildup or bristling of magnetic particles due to excessive magnetization of the component under examination resulting in a furry appearance.

gaussmeter, *n*—a device that measures magnetic flux density or magnetic induction (a quantity directly related to magnetic field strength or magnetic force); also known as a Tesla Meter or Magnetometer.

gaussmeter (electronic), *n*—a gaussmeter that uses a hall effect probe to measure magnetic flux density.

half-wave current (HW), *n*—a rectified single-phase alternating current that produces a pulsating unidirectional field.

hall effect, *n*—a phenomenon in which a transverse electric field is produced in a current-carrying conductor placed in a magnetic field.

hysteresis, *n*—(1) the lagging of the magnetic effect when the magnetic force acting upon a ferromagnetic body is changed; (2) the phenomenon exhibited by a magnetic system wherein its state is influenced by its previous history.

indirect magnetization, *n*—magnetization induced in a part when no direct electrical contact is made.

induced current method, *n*—see **current induction method**.

induced field, *n*—see **indirect magnetization**.

inherent fluorescence, *n*—fluorescence that is an intrinsic characteristic of a material.

inspection medium, *n*—see **examination medium**.

leakage field, *n*—see **field, magnetic leakage**.

leeches, *n*—permanent magnets or electromagnets that are attached to the electrodes carrying magnetizing current and that are strong enough to hold electrode contact firmly.

light intensity, *n*—the light energy reaching a unit area of surface per unit time.

lines of force, *n*—a conceptual representation of magnetic flux based upon the line pattern produced when iron filings are sprinkled on paper laid over a permanent magnet.

local magnetization, *n*—magnetization of a prescribed volume or surface of a part.

longitudinal magnetization, *n*—a magnetic field wherein the lines of force traverse the part in a direction essentially parallel with its longitudinal axis.

magnet, permanent, *n*—see **permanent magnet**.

magnetic field, *n*—the volume within and surrounding either a magnetized part or a current-carrying conductor wherein a magnetic force is exerted.

magnetic field indicator, *n*—a pocket meter that is used to locate or determine the relative intensity of leakage field emanating from a part.

magnetic field meter, *n*—an instrument designed to measure the flux density of magnetic fields.

magnetic field strength, *n*—the measured intensity of a magnetic field at a point, expressed in oersteds or amperes per metre.

magnetic hysteresis, *n*—in a magnetic material, as iron, a lagging in the values of resulting magnetization due to a changing magnetic force. (See also **hysteresis**.)

magnetic particle examination, *n*—see **magnetic particle testing**.

magnetic particle examination flaw indications, *n*—the accumulation of ferromagnetic particles along the areas of flaws or discontinuities due to the distortion of the magnetic lines of force in those areas.

magnetic particle field indicator, *n*—an instrument, typically a bi-metal (for example, carbon steel and copper) octagonal disk, containing artificial flaws used to verify the adequacy or direction, or both, of the magnetizing field.

magnetic particles, *n*—finely divided ferromagnetic material capable of being individually magnetized and attracted to distortion in a magnetic field.

magnetic particle testing, *n*—a nondestructive test method utilizing magnetic leakage fields and suitable indicating materials to disclose surface and near-surface discontinuity indications.

magnetic pole, *n*—one of two or more areas of flux leakage on a part.

magnetic writing, *n*—a form of nonrelevant indication sometimes caused when the surface of a magnetized part comes in contact with another piece of ferromagnetic material.

magnetization, circular, *n*—see **field, circular**.

magnetization, longitudinal, *n*—see **field, longitudinal**.

magnetizing current, *n*—the flow of either alternating or direct current used to induce magnetism into the part being inspected.

magnetizing force, *n*—the magnetizing field applied to a ferromagnetic material to induce magnetization.

multidirectional magnetization, *n*—the alternative application of magnetic fields in different directions during the same time frame.

near surface discontinuity, *n*—a discontinuity not open to, but lying near, the surface of a part undergoing examination which produces broad, fuzzy, lightly held powder patterns.

overall magnetization, *n*—magnetization of an entire part with a single energizing cycle.

parallel magnetism, *n*—a form of induced magnetism that introduces a distorted field into the part under examination. It is derived from placing an external current carry conductor adjacent and parallel to the part under examination.

permanent magnet, *n*—a magnet that retains a high degree of magnetization virtually unchanged for a long period of time (characteristic of materials with high retentivity).

permeability, *n*—the ratio of flux density produced to magnetizing force (the ease with which a material can become magnetized).

pole, *n*—the area on a magnetized part from which the magnetic field is leaving or returning into the part.

polymer technique, *n*—the examination technique in which a polymer is used as the particle suspension vehicle.

powder, *n*—see **dry powder**.

powder blower, *n*—a compressed air device used to apply magnetic powder over the surface of a part undergoing inspection.

prods, *n*—hand-held electrodes.

quick break, *n*—a sudden interruption of the magnetizing current.

residual magnetic field, *n*—the field that remains in ferromagnetic material after the magnetizing force has been removed.

residual technique, *n*—the application of the magnetic particles after the magnetizing force has been discontinued.

resultant field, *n*—see **field, resultant**.

retentivity, *n*—the ability of a material to retain a portion of the applied magnetic field after the magnetizing force has been removed.

saturation, magnetic, *n*—the total magnetization produced in a ferromagnetic material, at which point the incremental permeability has progressively decreased to approach unity.

sensitivity, *n*—the degree of capability of a magnetic particle examination technique for indicating surface or near surface discontinuities in ferromagnetic materials.

shot, *n*—a short energizing cycle in a magnetic particle examination.

shunt meter test set, *n*—this device minimally consists of a specially prepared current shunt and the accompanying meter for measuring high current magnetizing pulses used in the magnetic particle examination process. These kits may contain either an analog or digital read-out style meter and may or may not be specifically designed to be used with one magnetizing waveform. These kits may be designed to display specific engineering units for each waveform type

such as readings displayed in peak, RMS, or average. It is acceptable for a mathematical formula to be applied to the displaced value to derive the amperage units desired.

skin effect, *n*—the phenomenon that causes the magnetization produced by alternating current to be contained near the surface of a ferromagnetic part.

solenoid, *n*—an electrical conductor formed into a coil.

subsurface discontinuity, *n*—any defect that does not open onto the surface of the part in which it exists.

surge magnetization, *n*—use of a high initial current for a short period (less than a second), then a continuous reduced current while the inspection medium is applied.

suspension, *n*—a two-phase system consisting of a finely divided solid dispersed in a liquid.

swinging field, *n*—see **multidirectional magnetization**.

tangential field, *n*—a magnetic field at an object's surface, parallel and contiguous to the surface. This field may be either circular or longitudinal in direction.

test piece, *n*—a specimen containing known artificial or natural defects used for checking the efficiency of magnetic particle flaw detection processes.

test ring, *n*—a ring specimen containing artificial subsurface discontinuities which is used to evaluate and compare the overall performance and sensitivity of magnetic particle examination techniques.

through-coil technique, *n*—see **coil technique**.

true continuous technique, *n*—magnetic particle examination in which the magnetizing current is applied prior to the

application of the magnetic particles and is maintained without interruption throughout the examination.

UV-A, *n*—electromagnetic radiation in the near-ultraviolet wavelength range, 320 to 400 nm (3200 to 4000 Å).

DISCUSSION—UV-A may also be referred to as “UV-A light” or “UV-A radiation.” Sources producing UV-A typically have a peak emission (radiation) intensity at 365 nm (3650 Å).

UV-A pass filter, *n*—a filter that transmits UV-A while absorbing other wavelengths.

vehicle, *n*—a liquid medium for the suspension of magnetic particles.

visible light, *n*—electromagnetic radiation in the 400 to 760 nm (4000 to 7600 Å) wavelength range.

water break test, *n*—a quality control test of conditioned water.

wet slurry technique, *n*—a technique in which the magnetic particles are suspended in a high-viscosity vehicle.

wet technique, *n*—the examination technique in which the magnetic particles are suspended in a liquid vehicle.

white light, *n*—see **visible light**.

yoke, *n*—a magnet that induces a magnetic field in the area of a part that lies between its poles. Yokes may be permanent magnets or either alternating-current or direct-current electromagnets.

yoke magnetization, *n*—a longitudinal magnetic field induced in a part, or in an area of a part, by means of an external electromagnet shaped like a yoke.

Section H: Neutron Radiologic Testing (NRT) Terms

The terms defined in Section H are the direct responsibility of Subcommittee E07.05 on the Radiology (Neutron) Method. Additional radiological terms can be found in Section D.

activation, *n*—the process of causing a substance to become artificially radioactive by subjecting it to bombardment by neutrons or other particles.

attenuation coefficient, *n*—related to the rate of change in the intensity of a beam of radiation as it passes through matter. (See **linear and mass attenuation coefficient**.)

attenuation cross section, *n*—the probability, expressed in barns, that a neutron will be totally absorbed by the atomic nucleus.

barn, *n*—a unit of area used for expressing the area of nuclear cross sections.

$$1 \text{ barn} = 10^{-24} \text{ cm}^2 \quad (3)$$

cadmium ratio, *n*—the ratio of the neutron reaction rate measured with a given bare neutron detector to the reaction rate measured with an identical neutron detector enclosed by

a particular cadmium cover and exposed in the same neutron field at the same or an equivalent spatial location.

DISCUSSION—In practice, meaningful experimental values can be obtained in an isotropic neutron field by using a cadmium filter approximately 1-mm thick.

cassette, *n*—a light-tight device for holding film or conversion screens and film in close contact during exposure.

contrast agent, *n*—a material added to a component to enhance details by selective absorption of the incident radiation.

conversion screen, *n*—a device that converts the imaged neutron beam to radiation or light that exposes the radiographic film.

cross section, *n*—the apparent cross-sectional area of the nucleus as calculated on the basis of the probability of occurrence of a reaction by collision with a particle. It does

not necessarily coincide with the geometrical cross-sectional area πr^2 . It is given in units of area, 1 barn = 10^{-24} cm².

direct exposure imaging, n—in the direct exposure imaging method, the conversion screen and image recorder are simultaneously exposed to the neutron beam.

electron volt, n—the kinetic energy gained by an electron after passing through a potential difference of 1 V.

facility scattered neutrons, n—neutrons scattered in the facility that contribute to the film exposure.

γ , n—effective gamma content. γ is the percent background film darkening caused by low-energy photon radiation absorbed by pair production in 2 mm of lead.

gamma ray, n—electromagnetic radiation having its origin in an atomic nucleus.

half-life, n—the time required for one half a given number of radioactive atoms to undergo decay.

half-value layer, n—the thickness of an absorbing material required to reduce the intensity of a beam of incident radiation to one-half of its original intensity.

image quality indicator, n—a device or combination of devices whose image or images on a neutron radiograph provide visual or quantitative data, or both, concerning the radiographic sensitivity of the particular neutron radiograph.

indirect exposure, n—a method in which only a gamma-insensitive conversion screen is exposed to the neutron beam. After exposure, the conversion screen is placed in contact with the image recorder.

L/D ratio, n—one measure of the resolution capability of a neutron radiographic system. It is the ratio of the distance between the entrance aperture and the image plane (L) to the diameter of the entrance aperture (D).

linear attenuation coefficient, n—a measure of the fractional decrease in radiation beam intensity per unit of distance traveled in the material (cm⁻¹).

low-energy photon radiation, n—gamma- and X-ray photon radiation having energy less than 200 keV (excluding visible and ultraviolet light).

mass attenuation coefficient, n—a measure of the fractional decrease in radiation beam intensity per unit of surface density cm²·gm⁻¹.

moderator, n—a material used to slow fast neutrons. Neutrons are slowed down when they collide with atoms of light elements such as hydrogen, deuterium, beryllium, and carbon.

NC, n—effective thermal neutron content or neutron radiographic contrast. NC is the percent background film exposure due to unscattered thermal neutrons.

neutron, n—a neutral elementary particle having an atomic mass close to 1. In the free state outside of the nucleus, the neutron is unstable having a half-life of approximately 10 min.

neutron flux, n—the measure of the intensity of neutron beam radiation in the direction of the axis of the neutron beam outward from the neutron beam source, usually given in neutrons per cm² per second.

DISCUSSION—Historically, the term "neutron flux," which is widely used in the nuclear community, has been understood to mean neutron flux density (fluence rate).

neutron imaging, n—the process, science, and application of producing images (physically or in the form of data) of objects and phenomena by the means of neutron radiation.

neutron radiography, n—the process of producing a radiograph using neutrons as the penetrating radiation.

object scattered neutrons, n—neutrons scattered by the test objects that contribute to the film exposure.

P, n—effective pair production content. P is the percent background exposure caused by pair production in 2 mm of lead.

pair production, n—the process whereby a gamma photon with energy greater than 1.02 MeV is converted directly into matter in the form of an electron-positron pair. Subsequent annihilation of the positron results in the production of two 0.511 MeV gamma photons.

process control radiograph, n—a radiograph which images a beam purity indicator and sensitivity indicator under identical exposure and processing procedures as the test object radiograph. A process control radiograph may be used to determine image quality parameters in circumstances of large or unusual test object geometry.

radiograph, n—a permanent, visible image on a recording medium produced by penetrating radiation passing through the material being tested.

radiographic inspection, n—the use of X-rays or nuclear radiation, or both, to detect discontinuities in material, and to present their images on a recording medium.

radiography, n—the process of producing a radiograph using penetrating radiation.

radiological examination, n—the use of penetrating ionizing radiation to display images for the detection of discontinuities or to help ensure integrity of the part.

radiology, n—the science and application of X-rays, gamma rays, neutrons, and other penetrating radiations.

radioscopic inspection, n—the use of penetrating radiation and radioscopy to detect discontinuities in material.

radioscopy, n—the electronic production of a radiological image that follows very closely the changes with time of the object being imaged.

real-time radioscopy, n—radioscopy that is capable of following the motion of the object without limitation of time.

S, n—effective scattered neutron content. S is the percent background film darkening caused by scattered neutrons.

scattered neutrons, *n*, *n*—neutrons that have undergone a scattering collision but still contribute to film exposure.

sensitivity value, *n*, *n*—the value determined by the smallest standard discontinuity in any given sensitivity indicator observable in the radiographic image. Values are defined by identification of type of indicator, size of defect, and the absorber thickness on which the discontinuity is observed.

thermalization, *n*, *n*—the process of slowing neutron velocities by permitting the neutrons to come to thermal equilibrium with a moderating medium.

thermalization factor, *n*, *n*—the inverse ratio of the thermal neutron flux obtained in a moderator, per source neutron.

Section I: Ultrasonic Testing (UT) Terms

The terms defined in Section I are the direct responsibility of Subcommittee E07.06 on Ultrasonic Methods.

A-scan, *n*, *n*—a method of data presentation utilizing a horizontal base line that indicates distance, or time, and a vertical deflection from the base line which indicates amplitude.

acoustic birefringence, *n*, *n*—the effect observed when orthogonally polarized SH-shear waves are propagated through the same material thickness and the difference in phase velocity is related to components of plane stress.

amplitude, *n*, *n*—the vertical pulse height of a signal, usually base to peak, when indicated by an A-scan presentation.

angle beam, *n*, *n*—a term used to describe an angle of incidence or refraction other than normal to the surface of the test object, as in angle beam examination, angle beam search unit, angle beam longitudinal waves, and angle beam shear waves.

angle corrected gain, *n*, *n*—also called ACG. Is compensation applied to focal laws in an S-scan to correct for the effects of echo-transmittance variation at different angles. This may be accomplished by equalizing the amplitude response in the far field from a uniform reflector at a constant sound path through the range of angles used in the S-scan. An “infinite radius” such as that provided by the 100 mm radius of the IIW block is a convenient target for this function. A series of side drilled holes arranged in a radiused pattern may also present uniform reflectors at a constant sound path but the corrections are then in angular increments. Note that there are technical limits to ACG, that is, beyond a certain angular range, compensation is not possible.

apparent attenuation, *n*, *n*—the observed ultrasound energy loss. In addition to the true loss, the apparent attenuation may also include losses attributable to instrumentation, specimen configuration, beam divergence, interface reflections, and measurement procedure.

area amplitude response curve, *n*, *n*—a curve showing the changes in amplitude at normal incidence from planar reflectors of different areas located at equal distances from the search unit in an ultrasonic-conducting medium.

thermal neutrons, *n*, *n*—neutrons having energies ranging between 0.005 eV and 0.5 eV; neutrons of these energies are produced by slowing down fast neutrons until they are in equilibrium with the moderating medium at a temperature near 20 °C.

total cross section, *n*, *n*—the sum of the absorption and scattering cross sections.

vacuum cassette, *n*, *n*—a light-tight device having a flexible entrance window, which when operated under a vacuum, holds the film and conversion screen in intimate contact during exposure.

array (phased), *n*, *n*—a patterned arrangement of elements. Typical arrangements include linear, annular, two dimensional matrix, and “rho-theta”.

attenuation, *n*, *n*—a factor that describes the decrease in ultrasound intensity with distance. Normally expressed in decibel per unit length.

NOTE 7—The attenuation parameter is sometimes expressed in nepers (Np) per unit length. The value in decibels (dB) is 8.68 times the value in nepers. If the loss over a path is 1 Np, then the amplitude has fallen to 1/e of its initial value ($e = 2.7183\dots$).

attenuator, *n*, *n*—a device for altering the amplitude of an ultrasonic indication in known increments, usually decibels.

B-scan presentation, *n*, *n*—a means of ultrasonic data presentation which displays a cross section of the specimen indicating the approximate length (as detected per scan) of reflectors and their relative positions.

back reflection, *n*, *n*—signal response from the far boundary of the material under examination.

back surface, *n*, *n*—the end of a reference block that is opposite the entry surface.

base line, *n*, *n*—the time of flight or distance trace (horizontal) across the A-scan CRT display (for no signal condition).

beam axis, *n*, *n*—the acoustic centerline of a search unit’s beam pattern as defined by the locus of points of maximum sound pressure in the far field, and its extension into the near field.

beam spread, *n*, *n*—a divergence of the ultrasonic beam as the sound travels through a medium.

bottom echo, *n*, *n*—see **back reflection**.

bi-modal technique, *n*, *n*—ultrasonic examination method that utilizes both the longitudinal (L-wave) and shear (S-wave) modes of propagation in order to estimate or measure flaw height.

bubbler, *n*, *n*—a bubbler is used to provide a liquid stream that couples the transducer and the test piece. The bubbler assembly contains a reservoir of fluid surrounding the

ultrasonic transducer which is used to provide a continuous water supply that couples the ultrasonic transducer(s) sound transmission and the part.

C-scan, *n*—an ultrasonic data presentation which provides a plan view of the test object, and discontinuities therein.

collimator, *n*—a device for controlling the size and direction of the ultrasonic beam.

compressional wave, *n*—see **longitudinal wave**.

contact testing, *n*—a technique in which the search unit makes contact directly with the test piece through a thin layer of couplant.

continuous wave, *n*—a constant flow of ultrasonic waves, as opposed to pulsed.

control echo, *n*—reference signal from a constant reflecting surface, such as a back reflection.

corner effect, *n*—the reflection of an ultrasonic beam directed at normal incidence to the line of intersection of two perpendicular planes.

couplant, *n*—a substance used between the search unit and examination surface to permit or improve transmission of ultrasonic energy.

creeping wave, *n*—a compression wave that travels in a solid immediately adjacent to a boundary and generates a shear mode “headwave” (q.v.) travelling away from the boundary at the critical angle.

DISCUSSION—Some users reserve the term lateral wave for the creeping wave following a flat parallel surface and the creeping wave is used for those waves following curved surfaces.

critical angle, *n*—the incident angle of the ultrasonic beam beyond which a specific refracted wave no longer exists.

cross talk, *n*—the signal leakage (acoustic or electric) across an intended acoustic or electric barrier.

crystal (see transducer), *n*—the piezoelectric element in an ultrasonic search unit. The term is used to describe single crystal piezoelectrics as well as polycrystalline piezoelectrics, such as ferrocermamics.

Distance Amplitude Correction (DAC), *n*—compensation of gain as a function of time for difference in amplitude of reflections from equal reflectors at different sound travel distances. This may refer to either:

(a) Compensation by electronic means such as swept gain, time corrected gain (TCG), time variable gain (TVG) and sensitivity time control. Or;

(b) A curve constructed from the responses from a master target at several different ranges and subsequently plotted on the A-scan display to facilitate judgment of the significance of flaw echoes.

damping, search unit, *n*—limiting the duration of a signal from a search unit subject to a pulsed input by electrically or mechanically decreasing the amplitude of successive cycles.

dB control, *n*—a control that adjusts the amplitude of the display signal in dB units.

dead zone, *n*—the distance in the material from the surface of the test object to the depth at which a reflector can first be resolved under specified conditions. It is determined by the characteristics of the search unit, the ultrasonic test instrumentation, and the test object.

decibel (dB), *n*—twenty times the base ten logarithm of the ratio of two ultrasonic signal amplitudes, $dB = 20 \log_{10}$ (amplitude ratio).

delayed sweep, *n*—an A-scan or B-scan presentation in which an initial part of the time scale is not displayed.

DGS (distance gain size-German AVG), *n*—distance amplitude curves permitting prediction of reflector size compared to the response from a back surface reflection.

diffraction, *n*—the spreading or bending of waves as they pass through an aperture or around the edge of a barrier.

distance amplitude compensation (electronic), *n*—the compensation or change in receiver amplification necessary to provide equal amplitude on the display of the ultrasonic flaw detector for reflectors of equal area which are located at different depths in the material.

distance amplitude response curve, *n*—a curve showing the relationship between the different distances and the amplitudes of ultrasonic response from targets of equal size in an ultrasonic response from targets of equal size in an ultrasonic transmitting medium.

distance linearity range, *n*—the range of horizontal deflection in which a constant relationship exists between the incremental horizontal displacement of vertical indications on the A-scan presentation and the incremental time required for reflected waves to pass through a known length in a uniform transmission medium.

dual search unit, *n*—a search unit containing two elements, one a transmitter, the other a receiver.

dynamic range, *n*—a measure of the capability of a test system to accept input signals of varying magnitudes, given by the ratio of the maximum to minimum input signals which at constant gain will produce distortion-free outputs having discernible changes with incremental variations in input.

DISCUSSION—Dynamic range may be stated as the numerical value of the ratio; however, this is usually expressed in decibels.

DISCUSSION—When the output indications can be related to the size of recognized targets, such as flat-bottomed holes, dynamic range is sometimes expressed in terms of the maximum and minimum hole sizes that can be displayed.

echo, *n*—indication of reflected energy.

echo dynamic, *n*—amplitude versus time of arrival relationship of ultrasonic signals relative to probe position.

electronic scan, *n*—also termed as *E-scan*. The same focal law is multiplexed across a group of active elements; electronic raster scanning is performed at a constant angle and along

the phased-array probe length. This is equivalent to a conventional ultrasonic probe performing a raster scan. Also called electronic scanning.

ensonification, *n*—see **insonification**.

far field, *n*—the zone of the beam where equal reflectors give exponentially decreasing amplitudes with increasing distance.

flat-bottom hole (abbrev. FBH), *n*—a type of reflector commonly used in reference standards. The end (bottom surface) of the hole is the reflector. The hole bottom is typically parallel to the beam entry surface, but can be machined at other desired angles.

focal law, *n*—the entire set of hardware and software parameters affecting the acoustic sensitivity field of a phased array search unit, whether a pulse-echo or a pitch-catch configuration. Within focal laws, there are included delay laws in transmitter and delay laws in receiver, as well as apodization laws, and element activation laws.

focused beam, *n*—converging energy of the sound beam at a specified distance.

frequency (fundamental), *n*—in resonance testing, the frequency at which the wave length is twice the thickness of the examined material.

frequency (inspection), *n*—effective ultrasonic wave frequency of the system used to inspect the material.

frequency (pulse repetition), *n*—the number of times per second an electro-acoustic search unit is excited by the pulse generator to produce a pulse of ultrasonic energy. This is also called pulse repetition rate.

gap scanning, *n*—short fluid column coupling technique.

gate, *n*—an electronic means of selecting a segment of the time range for monitoring or further processing.

grating lobe, *n*—undesired additional beam caused by interference between the acoustic fields of the elements.

DISCUSSION—Grating lobes are unique to phased arrays and are due to the periodic spacing of elements. Grating lobes are a function of frequency, element spacing, and angle. Grating lobes are not to be confused with side lobes

grazing incidence, *n*—immersion inspection with the beam directed at a glancing angle to the test surface.

harmonics, *n*—those vibrations which are integral multiples of the fundamental frequency.

headwave, *n*—a wave that is generated by mode conversion when a point source is located at the boundary of an elastic half-space.

holography (acoustic), *n*—an inspection system using the phase interface between the ultrasonic wave from an object and a reference signal to obtain an image of reflectors in the material under test.

immersion testing, *n*—an ultrasonic examination method in which the search unit and the test part are submerged (at least locally) in a fluid, usually water.

impedance (acoustic), *n*—a mathematical quantity used in computation of reflection characteristics at boundaries; product of wave velocity and material density.

indication, *n*—that which marks or denotes the presence of a reflector.

initial pulse, *n*—the response of the ultrasonic system display to the transmitter pulse (sometimes called main bang).

insonification, *n*—the introduction or application of ultrasonic energy to a volume of material for the purpose of ultrasonic examination. Also spelled **ensonification**.

interface, *n*—the boundary between two materials.

Lamb wave, *n*—a specific mode of propagation in which the two parallel boundary surfaces of the material under examination (such as a plate or the wall of a tube) establish the mode of propagation. The Lamb wave can be generated only at particular values of frequency, angle of incidence and material thickness. The velocity of the wave is dependent on the mode of propagation and the product of the material thickness and the examination frequency.

L_{CR}, *n*—special designation for a longitudinal wave traveling in a halfspace and parallel to a surface with primary particle motion also parallel to the surface. It is excited at an incident angle in the upper material greater than the first critical angle and propagation speed is the bulk longitudinal speed in the lower material.

linear array probes, *n*—also called *ID array*. Probes made using a set of elements juxtaposed and aligned along a linear axis. They enable a beam to be moved, focused, and deflected along a single azimuthal plane.

linearity (amplitude), *n*—a measure of the proportionality of the amplitude of the signal input to the receiver, and the amplitude of the signal appearing on the display of the ultrasonic instrument or on an auxiliary display.

linearity (time or distance), *n*—a measure of the proportionality of the signals appearing on the time or distance axis of the display and the input signals to the receiver from a calibrated time generator or from multiple echoes from a plate of material of known thickness.

longitudinal wave, *n*—those waves in which the particle motion of the material is essentially in the same direction as the wave propagation.

loss of back reflection, *n*—an absence or significant reduction in the amplitude of the indication from the back surface of the part under examination.

markers, *n*—the electronically generated time pulses or other indicators that are used on the instrument display to measure distance or time.

matrix array probes, *n*—also called *1.5D* or *2D array*. These probes have an active area divided in two dimensions in different elements. This division can, for example, be in the form of a checkerboard, or sectored rings. These probes allow the ultrasonic beam steering in more than one plane.

mode, *n*—the type of ultrasonic wave propagating in the materials as characterized by the particle motion (for example, longitudinal, transverse, and so forth).

mode conversion, *n*—phenomenon by which an ultrasonic wave that is propagating in one mode can reflect or refract at an interface to form ultrasonic wave(s) of other modes.

multiple back reflections, *n*—successive reflections from the back surface of the material under examination.

multiple reflections, *n*—successive echoes of ultrasonic energy between two surfaces.

near field, *n*—the region of the ultrasonic beam adjacent to the transducer and having complex beam profiles. Also known as the Fresnel zone.

noise, *n*—any undesired signal (electrical or acoustic) that tends to interfere with the reception, interpretation, or processing of the desired signal.

normal incidence (see also straight beam), *n*—a condition in which the axis of the ultrasonic beam is perpendicular to the entry surface of the part under examination.

penetration depth, *n*—the maximum depth in a material from which usable ultrasonic information can be obtained and measured.

phased array transducer, *n*—a transducer made up of several piezo-electric elements individually connected so that the signals they transmit or receive may be treated separately or combined as desired. Multiple piezoelectric elements are sometimes arranged in patterns in a common housing; these are usually linear, matrix, or annular in shape. The elements can be pulsed simultaneously (as with “paintbrush” probes), or the elements can be pulsed independently of each other in varying patterns to achieve specific beam characteristics. With the last, some sophisticated beam steering and signal processing methodologies can be applied, for example, angle of incidence controllable by electronics, phased array focusing (beam steering, dynamic focusing).

plate wave, *n*—see **Lamb wave**.

probe, *n*—see **search unit**.

pulse, *n*—a short wave train of mechanical vibrations.

pulse echo method, *n*—an inspection method in which the presence and position of a reflector are indicated by the echo amplitude and time.

pulse length, *n*—a measure of the duration of a signal as expressed in time or number of cycles.

pulse repetition rate, *n*—see **frequency (pulse repetition)**.

pulse tuning, *n*—a control used on some ultrasonic examination equipment to optimize the response of the search unit

and cable to the transmitter by adjusting the frequency spectrum of the transmitted pulse.

radio frequency (r-f) display, *n*—the display of an unrectified signal on the CRT or recorder.

range, *n*—the maximum sound path length that is displayed.

Rayleigh wave, *n*—an ultrasonic surface wave in which the particle motion is elliptical and the effective penetration is approximately one wavelength.

reference block, *n*—a block that is used both as a measurement scale and as a means of providing an ultrasonic reflection of known characteristics.

reflection, *n*—see **echo**.

reflector, *n*—an interface at which an ultrasonic beam encounters a change in acoustic impedance and at which at least part of the energy is reflected.

reject (suppression), *n*—a control for minimizing or eliminating low amplitude signals (electrical or material noise) so that larger signals are emphasized.

resolution, *n*—the ability of ultrasonic equipment to give simultaneous, separate indications from discontinuities having nearly the same range and lateral position with respect to the beam axis.

resonance method, *n*—a technique in which continuous ultrasonic waves are varied in frequency to identify resonant characteristics in order to discriminate some property of a part such as thickness, stiffness, or bond integrity.

saturation, *n*—a condition in which an increase in input signal produces no increase in amplitude on the display.

saturation level, *n*—see **vertical limit**.

scanning, *n*—the movement of a search unit relative to the test piece in order to examine a volume of the material.

scanning index, *n*—the distance the search unit is moved between scan paths after each traverse of the part.

scattered energy, *n*—energy that is reflected in a random fashion by small reflectors in the path of a beam of ultrasonic waves.

scattering, *n*—the dispersion, deflection, or redirection of the energy in an ultrasonic beam caused by small reflectors in the material being examined.

Schlieren system, *n*—an optical system used for visual display of an ultrasonic beam passing through a transparent medium.

SE probe, *n*—see **dual search unit (twin probe)**.

search unit, *n*—an electro-acoustic device used to transmit or receive ultrasonic energy, or both. The device generally consists of a nameplate, connector, case, backing, piezoelectric element, wearface, or lens, or wedge.

sectorial scan, *n*—also termed an S-scan or azimuthal scan. This may refer to either the beam movement or the data display. As a data display, it is a 2D view of all A-scans from a specific set of elements corrected for delay and refracted

angle. When used to refer to the beam movement, it refers to the set of focal laws that sweeps a defined range of angles using the same set of elements.

sensitivity, *n*—a measure of the smallest ultrasonic signal which will produce a discernible indication on the display of an ultrasonic system.

shadow, *n*—a region in a body that cannot be reached by ultrasonic energy traveling in a given direction because of the geometry of the body or a discontinuity in it.

shear wave, *n*—wave motion in which the particle motion is perpendicular to the direction of propagation.

shear wave search unit (Y cut quartz search unit), *n*—a straight beam search unit used for generating and detecting shear waves.

side-drilled hole (abbrev. SDH), *n*—a type of reflector commonly used in reference standards. Side-drilled holes are circular cylindrical reflectors drilled parallel to the major surfaces of the reference standard with the intended target surface perpendicular to the sound beam axis.

signal-to-noise ratio, *n*—the ratio of the amplitude of an ultrasonic indication to the amplitude of the maximum background noise.

skip distance, *n*—in angle beam examination, the distance along the test surface, from sound entry point to the point at which the sound returns to the same surface. It can be considered the top surface distance of a complete vee path of sound in the test material.

squirter, *n*—a squirter is used to project a stable water column at considerable distance that supports the sound wave in either direction between the transducer and the part. The squirter assembly is composed of a housing that includes a transducer, a collimator to direct a predetermined column of water, and the water jet which serves as waveguide to support the sound transmission.

S-scan, *n*—(q.v. sectorial scan)

straight beam, *n*—a vibrating pulse wave train traveling normal to the test surface.

suppression, *n*—see **reject (suppression)**.

surface wave, *n*—see **Rayleigh wave**.

sweep, *n*—the uniform and repeated movement of an electron beam across the CRT.

swept gain, *n*—see **DAC**.

TCG (Time Corrected Gain, Time Controlled Gain), *n*—see **DAC**.

test surface, *n*—that surface of a part through which the ultrasonic energy enters or leaves the part.

testing, ultrasonic, *n*—a nondestructive method of examining materials by introducing ultrasonic waves into, through or onto the surface of the article being examined and determining various attributes of the material from effects on the ultrasonic waves.

through transmission technique, *n*—a test procedure in which the ultrasonic vibrations are emitted by one search unit and received by another at the opposite surface of the material examined.

time of flight, *n*—the sound path measurement of time for the transmitted, reflected or diffracted energy in a specimen.

time of flight diffraction technique (TOFD), *n*—an ultrasonic examination procedure using a pair of probes in a pitch-catch configuration, the probes being usually arranged symmetrically on the same surface, but opposite sides of a weld. Measurement of travel times for the forward reflected or diffracted energy from a flaw or reference surface is used to determine its depth and vertical extent.

transducer, *n*—an electroacoustical device for converting electrical energy into acoustical energy and vice versa. See also **crystal**.

transverse wave, *n*—see **shear wave**.

transverse wave, *n*—wave motion in which the particle displacement at each point in a material is perpendicular to the direction of propagation.

true attenuation, *n*—that portion of the observed ultrasound energy loss which is intrinsic to the medium through which the ultrasound propagates. True attenuation losses may be attributed to the basic mechanisms of absorption and scattering.

ultrasonic, *n*—pertaining to mechanical vibrations having a frequency greater than approximately 20 000 Hz.

ultrasonic noise level, *n*—the large number of unresolved indications resulting from structure or possibly from numerous small discontinuities, or both.

ultrasonic response, *n*—the height of the indication, observed on a display screen of a test instrument, that represents the amount of ultrasonic energy initially reflected from the hole bottom in a reference block. Units usually used in measuring height of indication are inches, trace-to-peak, or percent of upper linearity limit.

ultrasonic spectroscopy, *n*—analysis of the frequency spectrum of an ultrasonic wave.

vee path, *n*—the angle-beam path in materials starting at the search-unit examination surface, through the material to the reflecting surface, continuing to the examination surface in front of the search unit, and reflection back along the same path to the search unit. The path is usually shaped like the letter V.

vertical limit, *n*—the maximum readable level of vertical indications determined either by an electrical or a physical limit of an A-scan presentation.

video presentation, *n*—display of the rectified, and usually filtered, r-f signal.

water path, *n*—the distance from the transducer to the test surface in immersion or water column testing.

wave front, *n*—a continuous surface drawn through the most forward points in a wave disturbance which have the same phase.

wave train, *n*—a succession of ultrasonic waves arising from the same source, having the same characteristics, and propagating along the same path.

wedge, *n*—in ultrasonic angle-beam examination by the contact method, a device used to direct ultrasonic energy into the material at an angle.

Section J: Infrared Testing (IRT) Terms

The terms defined in Section J are the direct responsibility of Subcommittee E07.10 on Emerging NDT Methods.

absorptance, α , *n*—the ratio of radiant flux absorbed by a surface to that incident upon it.

apparent temperature, *n*—the temperature of an object as determined solely from the measured radiance, assuming an emissivity of unity.

background radiation, *n*—all radiation received by the infrared sensing device that was not emitted by the specified area of the surface being examined.

background, target, *n*—that portion of the background which is confined to the field of view.

blackbody, *n*—an ideal thermal radiator (emissivity = 1.0) that emits and absorbs all of the available thermal radiation at a given temperature.

blackbody equivalent temperature, *n*—the apparent temperature of an object as determined from the measured radiance and the assumption that it is an ideal blackbody with emissivity of 1.0.

differential blackbody, *n*—an apparatus for establishing two parallel isothermal planar zones of different temperatures, and with effective emissivities of 1.0.

emissivity, ϵ , *n*—the ratio of the radiance of a body at a given temperature to the corresponding radiance of a blackbody at the same temperature.

extended source, *n*—a source of infrared radiation whose image completely fills the field of view of a detector.

DISCUSSION—The irradiance is independent of the distance from the source to the region of observation. In practice, sources that are not extended sources are considered to be point sources; see **point source**.

field of view (FOV), *n*—the shape and angular dimensions of the cone or the pyramid which define the object space imaged by the system; for example, rectangular, 4° wide by 3° high.

imaging line scanner, *n*—an apparatus that scans in a single dimension and is moved perpendicular to the scan direction to produce a two-dimensional thermogram of a scene.

infrared imaging system, *n*—an apparatus that converts the two-dimensional spatial variations in infrared radiance from any object surface into a two-dimensional thermogram of the

wheel search unit, *n*—an ultrasonic device incorporating one or more piezoelectric elements mounted inside a liquid-filled flexible tire. The beam is coupled to the test surface through the rolling contact area of the tire.

wrap around, *n*—the display of misleading reflections from a previously transmitted pulse, caused by an excessively high pulse-repetition frequency.

same scene, in which variations in radiance are displayed in gradations of gray tone or in color.

infrared reflector, *n*—a material with a reflectance in the infrared region as close as possible to 1.00.

infrared sensing device, *n*—one of a wide class of instruments used to display or record, or both, information related to the thermal radiation received from any object surfaces viewed by the instrument. The instrument varies in complexity from spot radiometers to two-dimensional real-time imaging systems.

infrared thermographer, *n*—the person qualified or trained to use infrared imaging radiometer.

infrared thermography, *n*—see **thermography, infrared**.

instantaneous field of view (IFOV), *n*—for a scanning system, the angular dimensions in object space within which objects are imaged by an individual detector (unit = deg or rad).

DISCUSSION—The IFOV is equivalent to the horizontal and vertical fields of view of the individual detector. For small detectors, the detector angular subtenses or projections, α and β , are defined by $\alpha = a/f$ and $\beta = b/f$ where a and b are the horizontal and vertical dimensions of the detector and f is the effective focal length of the optic. (IFOV may also be expressed as a solid angle in units of sr.)

irradiance, E , *n*—the radiant flux (power) per unit area incident on a given surface (unit = W/m^2).

limiting resolution, *n*—the highest spatial frequency of a target that an imaging sensor is able to resolve.

line scanner, *n*—an apparatus that scans along a single line of a scene to provide a one-dimensional thermal profile of the scene.

minimum detectable temperature difference (MDTD), *n*—a measure of the compound ability of an infrared imaging system and an observer to detect a target of unknown location at one temperature against a large uniform background at another temperature when displayed on a monitor for a limited time.

DISCUSSION—For a given target size, the MDTD is the minimum temperature difference between the target and its background at which the observer can detect the target. The standard target is a circle whose size is given by its angular subtense, and both target and background are isothermal blackbodies.

minimum resolvable temperature difference (MRTD), *n*—a measure of the ability of an infrared imaging system and the human observer to recognize periodic bar targets on a display. The MRTD is the minimum temperature difference between a standard periodic test pattern (7:1 aspect ratio, 4 bars) and its blackbody background at which an observer can resolve the pattern as a four-bar pattern (see Fig. 4).

modulation transfer function (MTF), *n*—in infrared imaging systems, the modulus of a Fourier transform that describes the spatial distribution of the overall attenuation in amplitude of a thermal imaging system.

DISCUSSION—MTF is a sensitive function of spatial frequency.

noise equivalent temperature difference (NETD), *n*—the target-to-background temperature difference between a blackbody target and its blackbody background at which the signal-to-noise ratio of a thermal imaging system or scanner is unity.

object plane resolution, *n*—the dimension in the object plane that corresponds to the product of a system's instantaneous field-of-view and a specified distance from the system to the object.

point source, *n*—a source whose linear dimensions are very small compared with the distance from the source to the region of observation.

DISCUSSION—The irradiance varies inversely with the square of the distance; a unique property of point sources.

radiance, *L*, *n*—the flux per unit projected area per unit solid angle leaving a source or, in general, any reference surface. If $d^2\Phi$ is the flux emitted into a solid angle $d\omega$ by a source element of projected area $dA \cos \theta$, the radiance is defined as:

$$L = \frac{d^2\Phi}{d\omega \cdot dA \cos \theta} \quad (4)$$

where, as shown in Fig. 5, θ is the angle between the outward surface normal of the area element dA and the direction of observation (unit = $\text{W}/\text{sr} \cdot \text{m}^2$).

radiant exitance, *M*, *n*—the radiant flux per unit area leaving a surface that is,

$$M = \frac{d\Phi}{dA} \quad (5)$$

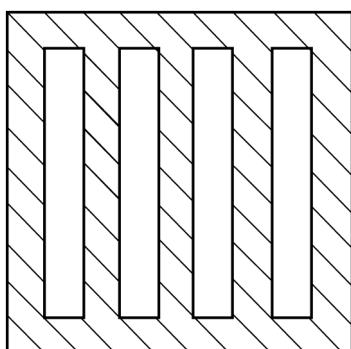


FIG. 4 Schematic Diagram of Four-Bar Pattern with Background, Used to Evaluate Minimum Resolvable Temperature Difference

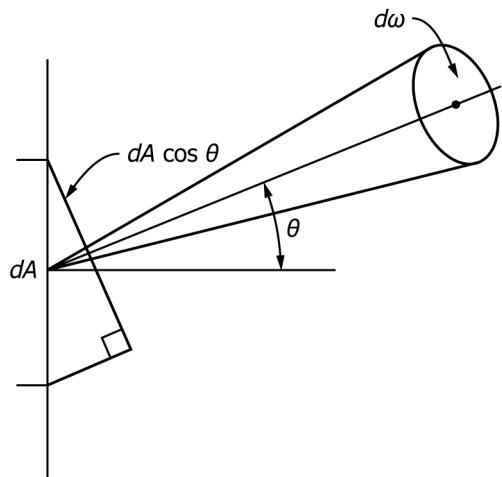


FIG. 5 Schematic Representation of Radiance

where:

$d\Phi$ = flux leaving a surface element dA (unit = W/m^2).

DISCUSSION—In general, exitance includes emitted, transmitted and reflected flux.

radiant flux; radiant power, Φ_e , *n*—radiant energy per unit time (unit = W).

radiometer, *n*—an instrument for measuring the intensity of radiant energy. In infrared thermography, an apparatus that measures the average apparent temperature of the surface subtended by its field of view.

reflectance, *n*—the ratio of the radiant flux reflected from a surface to that incident upon it.

reflected temperature, *n*—the temperature of the energy incident upon and reflected from the measurement surface of a specimen.

spatial frequency, *n*—a measure of detail in terms of equivalent, uniformly spaced, cyclical patterns. In an object or image plane, it may be expressed in units of cycles per millimetre (cy/mm) or line pairs per millimetre (lp/mm). In an imaging system, it may be expressed in units of cycles per milliradian (cy/mrad) or line pairs per milliradian (lp/mrad).

thermal resolution, *n*—the smallest apparent temperature difference between two blackbodies that can be measured by an infrared sensing device.

thermogram, *n*—a visual image which maps the apparent temperature pattern of an object or scene into a corresponding contrast or color pattern.

thermography, infrared, *n*—the process of displaying variations of apparent temperature (variations of temperature or emissivity, or both) over the surface of an object or a scene by measuring variations in infrared radiance.

DISCUSSION—In general, *passive thermography* refers to examination of an object or system during its normal operational mode, without the application of any additional energy source for the express purpose of generating a thermal gradient in the object or system; *active thermography* refers to the examination of an object upon intentional application of an external energy source. The energy source (active or passive)

may be a source of heat, mechanical energy (vibration or fatigue testing), electrical current, or any other form of energy.

transmittance, τ , *n*—the ratio of the radiant flux transmitted through a body to that incident upon it.

vibrothermography, *n*—a thermographic technique for examining an object in which temperature differences are produced by excitation.

Section K: Optical Holographic Testing (HT) Terms

The terms defined in Section K are the direct responsibility of Subcommittee E07.10 on Emerging NDT Methods.

amplitude hologram, *n*—a recording of the variation of light intensity caused by the interference between the reference beam and the object beam, as light or dark areas on the recording medium. The light and dark interference lines in the recording medium diffract laser light to produce the reconstruction.

beam ratio, *n*—the measured intensity of the reference beam divided by the measured intensity of the object beam in the plane of the recording medium.

beamsplitter, *n*—an optical device for dividing a beam into two or more separate beams.

coherence, *n*—a property of a beam of electromagnetic radiation in which the phase relationship between any two points across the beam or in time remains essentially constant (see **coherence length**).

coherence length, *n*—the path difference between the object beam and the reference beam at which interference fringes reduce in contrast by a factor of $\sqrt{2}/2$ (0.707) from the point of maximum contrast. The coherence length is related to the width of the spectral line emitted from the laser: $L_c = c/\Delta v$, where c is the speed of light and Δv is the bandwidth of the spectral emission line.

exposure, *n*—the product of irradiance and time required to produce a suitable pattern on the recording medium.

fringe, *n*—one of the light or dark bands produced by the interference of the light scattered by the real object and the virtual image of the object.

holography (optical), *n*—a technique for recording, and reconstructing, the amplitude and phase distributions of a wave disturbance; widely used as a method of three-dimensional optical image formation. The technique is accomplished by recording the pattern of interference between coherent light reflected from the object of interest (object beam), and light that comes directly from the same source (reference beam).

interference, *n*—the variation with distance or time of the amplitude of a wave which results from the superposition of two or more waves having the same, or nearly the same frequency.

monochromatic, *n*—a property of a beam of electromagnetic radiation in which all waves in the beam have the same wavelength.

object beam, *n*—the portion of laser radiation which illuminates the test object surface, is scattered, and carries object information to the recording medium.

object beam angle, *n*—the angle between a line from the center of the object to the center of the recording medium and the normal to the center of the recording medium.

path length, *n*—the distance traveled by the laser radiation from the beam splitter to the recording medium.

path length difference, *n*—the difference in path length between the object beam and the reference beam.

phase hologram, *n*—a recording of the variations in light intensity caused by the interference of the reference beam with the object beam as variations in the thickness or index of refraction of the recording medium. The variations in thickness or index refract coherent light to produce the reconstruction.

real image, *n*—a reproduction of an object by an optical system which gathers light from an object point and transforms it into a beam that converges toward another point.

recording medium, *n*—a light-sensitive material which detects the interference between the object beam and the reference beam. Typical recording media used in holography are silver halide film, thermoplastic film and electronic detectors, such as video tubes and CCD arrays.

reference beam, *n*—laser radiation impinging directly upon the recording medium through optical components and which typically does not contain information about the test object. In some tests, the reference beam may be reflected or scattered from a portion of the object surface. In this case, any object information contained in the reference beam is cancelled in the object beam by the interference between the object beam and the reference beam.

reference beam angle, *n*—the angle formed between the center line of the reference beam and the normal to the recording medium.

speckle, *n*—the random interference pattern which results from the illumination of an optically rough surface with coherent radiation. In laser systems, it results in the granular effect which can be seen in a scattered beam.

virtual image, *n*—a reproduction of an object by an optical system which gathers light from an object point and transforms it into a beam that appears to diverge from another point.

Section L: Visual Testing (VT) Terms

The terms defined in Section L are the direct responsibility of Subcommittee E07.10 on Emerging NDT Methods.

accommodation, visual, *n*—adjustment of the eye, either the focus or the iris opening, to optimize its performance under the specific viewing conditions prevailing.

ambient light, *n*—light not provided by the visual testing system.

borescope, *n*—a flexible or rigid tube-like instrument used for a remote direct viewing visual aid. The instrument may consist of mirrors, prisms, lenses, optic-fibers, or a miniature CCD camera to transmit images to the viewing or recording medium.

candela, *n*—a unit of luminous intensity (formerly candle). One candela is the luminous intensity in the perpendicular direction of a surface of $\frac{1}{600\,000}\text{ m}^2$ of a blackbody radiator at the temperature of freezing platinum under a pressure of 101 325 Pa. One candela produces 1 lumen of luminous flux per steradian of a solid angle measured from the source.

charge-coupled device (CCD), *n*—a light-detecting video device in which individual components are connected so that the electrical charge or signal at the output of one component provides the input to the next.

closure, *n*—process by which a person cognitively completes patterns or shapes that are incompletely perceived.

contrast, *n*—the difference between the amount of light reflected or transmitted by an object and by the background within the field of view.

depth of field, *n*—the range of distance over which an imaging system gives satisfactory definition when it is in the best focus for a specific distance.

direct viewing, *n*—a view that is not redefined by optical or electronic means.

feature extraction, *n*—characterization of objects in an image, usually with the goal of distinguishing those objects.

fiber optics, *n*—method by which light is transmitted through thin transparent fibers.

field angle, *n*—the included angle between those points on opposite sides of a light beam at which the luminous intensity is 10 % of the maximum value.

filter, *n*—a processing component or function that excludes, passes or amplifies a selected kind of signal or part of a signal.

filter coefficients, *n*—values which define a mask filter in image processing.

glare, *n*—excessive brightness which interferes with clear vision, critical observation, and judgment.

glossmeter, *n*—an instrument for measuring the ratio of the light regularly or specularly reflected from a surface to the total light reflected.

illuminance, *n*—the density of luminous flux on a surface per unit area. Measured in the SI system by lux.

light, *n*—electromagnetic radiation in the spectral range detectable by the normal human eye (wavelengths of approximately 380 to 780 nm).

lumen, *n*—luminous flux emitted within one steradian by a point source having a spatially uniform luminous intensity of one candela. SI unit of luminous flux.

luminance, *n*—the ratio of the luminous intensity of a surface in a given direction to a unit of projected area. Measured in candela per square metre.

monochromator, *n*—a device for isolating monochromatic radiation from a beam of radiation which includes a broad range of wavelengths.

reflection, *n*—the process by which the incident flux leaves a surface or medium from incident side, without a change in frequency, but may change polarity. Reflection is usually a combination of specular and diffuse reflection.

saturation, *n*—relative or comparative color characteristic resulting from a hue's dilution with white light.

visibility, *n*—the quality or state of being perceived by the eye. In many outdoor applications, visibility is defined in terms of the distance at which an object can be reliably resolved from its surroundings. In outdoor applications it usually is defined in terms of contrast or size of a standard test object, observed under standardized viewing conditions, having the same threshold as the given object.

visual field, *n*—point or points in space that can be perceived when the head and eyes are kept fixed. The field may be monocular or binocular.

white light, *n*—light containing all wave lengths in the visible spectrum (in the range from 380 to 780 nm).

ASTM International takes no position respecting the validity of any patent rights asserted in connection with any item mentioned in this standard. Users of this standard are expressly advised that determination of the validity of any such patent rights, and the risk of infringement of such rights, are entirely their own responsibility.

This standard is subject to revision at any time by the responsible technical committee and must be reviewed every five years and if not revised, either reapproved or withdrawn. Your comments are invited either for revision of this standard or for additional standards and should be addressed to ASTM International Headquarters. Your comments will receive careful consideration at a meeting of the responsible technical committee, which you may attend. If you feel that your comments have not received a fair hearing you should make your views known to the ASTM Committee on Standards, at the address shown below.

This standard is copyrighted by ASTM International, 100 Barr Harbor Drive, PO Box C700, West Conshohocken, PA 19428-2959, United States. Individual reprints (single or multiple copies) of this standard may be obtained by contacting ASTM at the above address or at 610-832-9585 (phone), 610-832-9555 (fax), or service@astm.org (e-mail); or through the ASTM website (www.astm.org). Permission rights to photocopy the standard may also be secured from the Copyright Clearance Center, 222 Rosewood Drive, Danvers, MA 01923, Tel: (978) 646-2600; <http://www.copyright.com/>